

# Energy Management

## Energy Analyzer

### Type EM270

CARLO GAVAZZI



- 2 programmable pulsating outputs (optional)
- Easy connections management (selectable) disabled by default
- Fast installation system by:
  - Detachable dual voltage terminal blocks
  - Daisy-chain of max 20 EM270 by dual voltage terminal blocks
  - Detachable serial and pulse outputs terminal blocks
  - RJ11 connection for external TCD current transformers
- Overall dimensions: 72x72 mm
- Protection degree (front): IP50
- Equivalent to Class 1 (kWh) of EN62053-21 (EM270 Base only)
- Equivalent to Class 2 (kvarh) of EN62053-23 (EM270 Base only)
- Equivalent to Class 0.5 (currents) of EN60044-1 (TCD current transformers only)
- 2 meters in 1:
  - up to 2 three-phase loads with virtual sum function
- 6 meters in 1:
  - up to 6 single-phase loads system
- Virtual meter (sum of two 3-phase or six 1-phase loads)
- Energy meter with 6+1 DGT readout
- Current measurement up to 630 A with external TCD current transformer accessories
- Auto-detection of the primary current of the external TCD current transformer
- Phase order of external TCD current transformer selectable
- Instantaneous variables readout: 3-DGT (power: 3-DGT, current and voltage: 3-DGT)
- Single phase variables: V, A, kW
- Total energy measurements: total kWh and kvarh
- TRMS measurements of distorted sine waves (voltages/currents)
- Self power supply
- RS485 serial communication port (standard)
- RS485 dual port for daisy chain connection (optional)

## Product description

Dual three-phase energy meter with built-in configuration key-pad and LCD data displaying capable to measure the consumed energy (and other electrical parameters) by up to two three-phase loads or by up to six single-phase loads. Housing for both DIN-rail and panel mount-

ing with IP50 (front) protection degree. The voltage connections are carried out by a couple of detachable terminals so to allow a very fast daisy chain installation of multiple meters. Measurement of the current up to 630 A with external TCD current transformer accessories

connected by RJ11. Moreover the meter is provided either with two pulsating outputs proportional to the active energy being measured (e.g. one for lighting load and one for power load) and a serial RS485 port or with a dual serial RS485 port based on detachable termi-

nals for a fast installation. A virtual energy meter can be enabled to provide the total consumptions data of the two 3-phase loads (or of the six 1-phase ones).



## How to order

**EM270-72DMV53XOSX**

Model	_____
Range code	_____
System	_____
Power supply	_____
Output	_____
Option	_____

## Type Selection

Range code	System	Power supply	Outputs
<b>MV5:</b> 230VLN/400VLL AC)	<b>3:</b> 3-phase 3-wire, 3-phase 4-wire, or 1-phase 2-wire	<b>X:</b> Self power supply from 40V to 460VA- CLL, 45 to 65Hz	<b>OS:</b> dual static output (opto-mosfet) and serial port
<b>MV6:</b> 120VLN/230VLL AC both by TCD current transformers			
			<b>2S:</b> dual RS485 serial communication port

### Option

**X:** none

## Input specification

<b>Rated Input</b>	Current type	Galvanic insulation carried out by means of external TCD current transformer accessories	Reactive power	From 0.02In to 0.05In, within Un range, $\sin(\varphi)=1$ : $\pm(3\% \text{ RDG} + 2\text{DGT})$
	Current range	630 A with TCD current transformer		From 0.05In to 0.2In, within Un range, $\sin(\varphi)=1$ : $\pm(2.5\% \text{ RDG} + 1\text{DGT})$
	Voltage	230VLN and 400VLL (MV5), 120VLN and 230VLL (MV6)		From 0.2In to Imax, within Un range, $\sin(\varphi)=1$ : $\pm(2.25\% \text{ RDG} + 1\text{DGT})$
<b>Accuracy</b>		The below data considers the whole measuring chain: EM270 base meter and TCD current transformer		From 0.05In to 0.1In, within Un range, $\sin(\varphi)=0.5$ (L or C): $\pm(3.5\% \text{ RDG} + 2\text{DGT})$
	(Display, serial communication) (@25°C $\pm 5^\circ\text{C}$ , R.H. $\leq 60\%$ , 45 to 65 Hz)			From 0.1In to 0.2In, within Un range, $\sin(\varphi)=0.5$ (L or C): $\pm(3\% \text{ RDG} + 1\text{DGT})$
	Current range	In: 160A, 250A, 630A (TCD primary current)	Energies	From 0.2In to Imax, within Un range, $\sin(\varphi)=0.5$ (L or C): $\pm(2.5\% \text{ RDG} + 1\text{DGT})$
	Voltage range	Un: see below		kWh: better than the combination of a class 1 of EN62053-21 meter (EM270 base) and class 0.5 of EN60044-1 CTs (TCD current transformer) considering the whole measurement chain (see Active power above).
	Current	From 0.02In to 0.05In: $\pm(1.25\% \text{ RDG} + 3\text{DGT})$ From 0.05In to 0.2In: $\pm(1\% \text{ RDG} + 2\text{DGT})$ From 0.2In to Imax: $\pm(0.75\% \text{ RDG} + 1\text{DGT})$		kvarh: better than the combination of a class 2 of EN62053-23 meter (EM270 base) and class 0.5 of EN60044-1 CTs (TCD current transformer) considering the whole measurement chain (see Reactive power above). Start-up current: 0.002In.
	MV5 range	Un: 160 to 260VLN (277 to 450VLL)		
	MV6 range	Un: 40 to 144VLN (70 to 250VLL)		
	Phase-neutral voltage	In the range Un: $\pm(0,5\% \text{ RDG} + 1\text{DGT})$		
	Phase-phase voltage	In the range Un: $\pm(1\% \text{ RDG} + 1\text{DGT})$		
	Frequency	Range: 45 to 65Hz. Resolution: 1Hz		
	Active power	From 0.02In to 0.05In, within Un range, PF=1: $\pm(2\% \text{ RDG} + 2\text{DGT})$ From 0.05In to 0.2In, within Un range, PF=1: $\pm(1.5\% \text{ RDG} + 1\text{DGT})$ From 0.2In to Imax, within Un range, PF=1: $\pm(1.25\% \text{ RDG} + 1\text{DGT})$ From 0.05In to 0.1In, within Un range, PF=0.5L or 0.8C: $\pm(2.5\% \text{ RDG} + 2\text{DGT})$ From 0.1In to 0.2In, within Un range, PF=0.5L or 0.8C: $\pm(2\% \text{ RDG} + 1\text{DGT})$ From 0.2In to Imax, within Un range, PF=0.5L or 0.8C: $\pm(1.5\% \text{ RDG} + 1\text{DGT})$		
			<b>Temperature drift</b>	$\leq 200\text{ppm}/^\circ\text{C}$
			<b>Sampling rate</b>	1600 samples/s @ 50Hz; 1900 samples/s @ 60Hz
			<b>Display</b>	2 lines (1 x 7-DGT + 1 x 3-DGT) LCD, h 7 mm
			Type	
			Instantaneous variables readout	3-DGT (Power: 3-DGT, currents: 3-DGT)
			Energies	Imported Total: 6+1DGT
			Overload status	EEE indication when the value being measured is exceeding the "Continuous inputs overload" (maximum measurement capacity)

## Input specification (cont.)

<b>Max. and Min. indication</b>	Max. instantaneous variables: 999; energies: 9 999 999. Min. instantaneous variables: 0; energies 0.0	<b>Crest factor</b>	1.414 @ I <sub>max</sub> (I <sub>max</sub> =1.2 I <sub>n</sub> = 0.4V). In any case: V <sub>peak</sub> max = 0.565V
Refresh time	1 second	<b>Voltage Overloads</b>	Continuous For 500ms
<b>LEDs</b>	Red LED (Energy consumption only, relevant to the sum of the consumption of any load connected to the meter, 1 imp./kWh according to EN50470-1. Green LED for Power-on (steady) and communication status: RX-TX (in case of RS485 option only), blinking.	<b>Voltage input impedance</b>	Self-power supply Power Consumption: < 4VA / 2W
<b>Measurements</b>	See "List of the variables that can be connected to:"	<b>Frequency</b>	45 to 65 Hz
Method	TRMS measurements of distorted wave forms.	<b>Keypad</b>	2 pushbuttons for variable selection and programming of the digital output parameters
Coupling type	By means of the external current transformer accessories.		

## Output specifications

<b>Pulse output</b>		<b>Addresses</b>	247, selectable by means of the front keypad
Number of outputs	2, Programmable from 0.1 to 1000 pulses per kWh.	<b>Protocol</b>	MODBUS/JBUS (RTU)
Type	Output connectable to the energy meters (kWh)	<b>Data (bidirectional)</b>	
Connection type	Detachable screw terminal connectors	Dynamic (reading only)	System and phase variables: see table "List of the variables that can be connected to:".
Pulse duration	Selectable, 40ms or 100 ms (ON), according to EN62052-31. Static: opto-mosfe	Static (reading and writing)	All the configuration parameters.
Output	V <sub>ON</sub> 2.5 VAC/DC/ max. 70 mA	<b>Data format</b>	1 start bit, 8 data bit, no or even parity, 1 stop bit
Load	V <sub>OFF</sub> 40 VAC/DC max.	<b>Baud-rate</b>	9.6, 19.2, 38.4 kbaud
Insulation	4kVp/2,5kVAC output to measuring inputs.	<b>Driver input capability</b>	1/5 unit load. Maximum 160 transceivers on the same bus.
<b>RS485</b>		<b>Insulation</b>	By means of opto-couplers, 4kVp/2,5kVAC output to measuring input.
Type	Multidrop, bidirectional (static and dynamic variables)		
Connections	2-wire max. distance 1000m		
Connection type	Detachable screw terminal connectors		
Termination	Termination by using a proper jumper in the terminal block.		

## Software functions

<b>Password</b>		<b>Transformer ratio</b> VT (PT) ratio CT primary current	1.0 to 99.9 / 100 to 999 Auto-detection of the primary current of the TCD current transformer. The 2 TCD's shall have the same primary current . The maximum value of the VT is limited to grant the measurement of the mx possible power (210MW). The following table list the max VT values. In case of programming a VT or a current primary value which exceed this limit, an error message appears for 2 s, then the previous value is displayed again. An exception is sent via Modbus in case of wrong CT or VT value set via serial communication.
	1st level		
	2nd level		
	Lock knob		
<b>System selection</b>	System 1.3P unbalanced load	3-phase (3- or 4-wire). Management of one 3-phase load. 3-phase (3- or 4-wire). Management of two 3-phase loads. 1-phase (2-wire). Management of three 1-phase loads. 1-phase (2-wire). Management of six 1-phase loads.	
	System 2.3P unbalanced load		
	System 3.1P unbalanced load		
	System 6.1P unbalanced load		
<b>Function selection</b>	Function SUM	ON: each single system and total data (A, W, kWh) available. OFF: each single system data available without total data 123: Phase L1 is in the top (looking at the installed TCD with the output cable on the right). 321: Phase L3 is in the top (looking at the installed TCD with the output cable on the right). ON: measurement independent on current direction. OFF: measurement dependent on current direction (default).	
	TCD phase order		
	Easy connection Function (EC)		
<b>Easy connection function</b>	When NOT active, energies (kWh and kvarh) and power (kW) measurements are dependent from the current direction (if negative, A, P, Q are shown with the “-“ sign). The displayed energy values are only relevant to the “imported” energies.	<b>Max VT (PT) ratio</b> MV5 model	Primary current 160 A: VT max 620. Primary current 250 A: VT max 410. Primary current 630 A: VT max 150.
		MV6 model	Primary current 160 A : VT max 999. Primary current 250 A: VT max 720. Primary current 630 A: VT max 270
		<b>Integration time</b> For dmd power calculation	Selectable, from 1 to 60 min
		<b>Displaying</b>	Up to 3 variables per page. See «Display pages»
<b>Reset</b>			By means of the front keypad: - total energies (function SUM on): kWh - partial energies: single load energy (kWh) and demanded power (Wdmd) - Max demand (Md) of active and apparent power.

## General specifications


<b>Operating temperature</b>	Operating temperature -25 to +55°C (-13°F to +131°F) (R.H. from 0 to 90% non-condensing @ 40°C) according to EN62052-11	<b>Standard compliance</b>	
		Safety	IEC60664, EN60664, IEC61010-1, EN61010-1, EN62052-11, EN50470-1, DIN43864, IEC62053-31
		Pulse output	
		<b>Approvals</b>	CE
<b>Storage temperature</b>	-30 to +70°C (-22°F to +158°F) (R.H. < 90% non-condensing @ 40°C) according to EN62052-11	<b>Connections</b>	
		Voltage	Detachable dual screw terminals. Max wire cross section 1.5 mm <sup>2</sup> (14 AWG). Min./max. screws tightening torque: 0.2/0.25 Nm
<b>Overvoltage category</b>	Cat. III (IEC 60664, EN60664)	Current inputs	2x RJ11 (female) for current connections
<b>Dielectric strength</b>	4000VAC RMS for 1 minute (all terminals to front panel)	Outputs (pulse and RS485 port)	Detachable screw terminals. Max wire cross section 1.5 mm <sup>2</sup> (14 AWG). Min./max. screws tightening torque: 0.2/0.25 Nm.
<b>Noise rejection</b>			
CMRR	100 dB, 48 to 62 Hz		
<b>EMC</b>	According to EN62052-11 and EN50470-1 (E2)	<b>Housing</b>	
Electrostatic discharges	5kV air discharge, 8kV contact discharge;	Dimensions (WxHxD)	72 x 72 x 65 mm
Immunity to irradiated electromagnetic fields	Test with current: 10V/m from 80 to 2000MHz Test without any current: 30V/m from 80 to 2000MHz;	Material	Noryl, self-extinguishing: UL 94 V-0
Burst	On current (TCD primary) and voltage measuring inputs circuit: 4kV	Mounting	DIN-rail or Panel mounting
Immunity to conducted disturbances	10V/m from 150kHz to 80Mhz	<b>Protection degree</b>	
Surge	On current (TCD primary) and voltage measuring inputs circuit: 4kV;	Front	IP50
Radio frequency suppression	According to CISPR 22	Screw terminals	IP20
		<b>Weight</b>	Approx. 400g (packing included)

## Power supply specifications


<b>Self supplied version</b>	From 40V to 460VAC LL, 45 to 65Hz, between L2 and L3	<b>Power consumption</b>	≤4VA/2W
------------------------------	--	--------------------------	---------

## Accuracy

kWh, PF=1, compared with a cl 1 meter EN62053-2 and a cl 0.5 CT EN60044-1

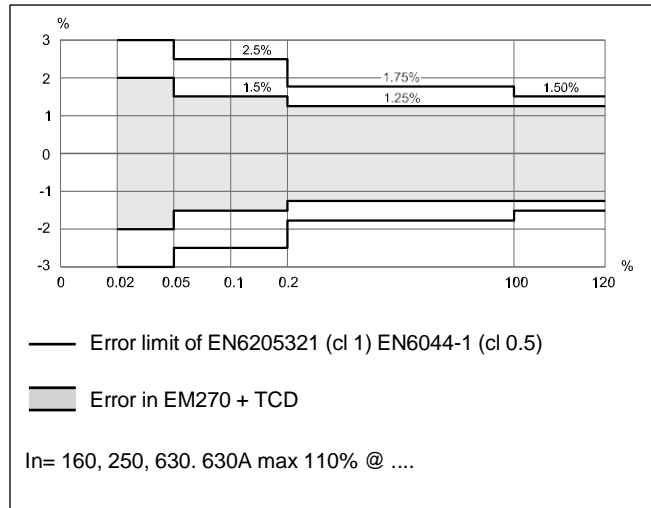

kWh, PF=0.5L, compared with a cl 1 meter EN62053-21 and a cl 0.5 CT EN60044-1

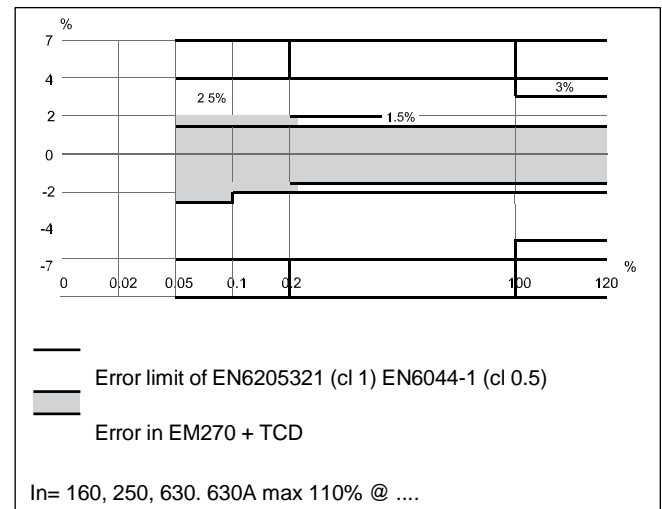

## Used calculation formulas

### Phase variables

Instantaneous effective current

$$A_1 = \sqrt{\frac{1}{n} \cdot \sum_1^n (A_1)_i^2}$$

Instantaneous apparent power

$$VA_1 = V_{1N} \cdot A_1$$

Instantaneous reactive power

$$\text{var}_1 = \sqrt{(VA_1)^2 - (W_1)^2}$$

### System variables

Three-phase reactive power

$$\text{var}_\Sigma = (\text{var}_1 + \text{var}_2 + \text{var}_3)$$

Three-phase active power

$$W_\Sigma = W_1 + W_2 + W_3$$

Three-phase apparent power

$$VA_\Sigma = \sqrt{W_\Sigma^2 + \text{var}_\Sigma^2}$$

Three-phase power factor

$$\cos \varphi_\Sigma = \frac{W_\Sigma}{VA_\Sigma}$$

### Energy metering

$$k \text{ var hi} = \int_{t_1}^{t_2} Qi(t) dt \cong \Delta t \sum_{n1}^{n2} Qnj$$

Where:

**i**= considered phase (L1, L2 or L3)  
**P**= active power; **Q**= reactive power;  
**t1, t2**=starting and ending time points of consumption recording; **n**= time unit; **Δ t**= time interval between two successive power consumptions;  
**n1, n2**= starting and ending discrete time points of consumption recording

## List of the variables that can be connected to:

### RS485 communication port

All the variables listed in the "Display pages" table, when available (according to the selected system), can be read via serial communication

### Pulse outputs

Pulse out 1

Pulse out 2

kWh load 1 (3-phase load 1 or sum of 1-phase loads 1, 2, 3)  
kWh load 2 (3-phase load 2 or sum of 1-phase loads 4, 5, 6)

## Display pages

No	A (1st line)	B (1st line)	(2nd line)	SYS 1.3P	SYS 2.3P	SYS 3.1P	SYS 6.P	Note
1	kWh		kW ( $\Sigma$ )		S	S	S	$\Sigma$ = Total
2	dMd		kW ( $\Sigma$ )		S	S	S	$\Sigma$ = Total, dMd = dmd
3	Pd		kW ( $\Sigma$ )		S	S	S	$\Sigma$ = Total, Pd = maximum (peak) demand
4	A L1 ( $\Sigma$ )	A L2 ( $\Sigma$ )	A L3 ( $\Sigma$ )		S1	S1	S1	$\Sigma$ (Total) single phase currents
5	kvarh		kvar ( $\Sigma$ )		S	S	S	$\Sigma$ = Total
6	dMd		kVA ( $\Sigma$ )		S	S	S	$\Sigma$ = Total, demand = dmd
7	Pd		kVA ( $\Sigma$ )		S	S	S	$\Sigma$ = Total, Pd = maximum (peak) demand
8a	kWh (Load A1)		kW (Load A1)	X	X			
8b	kWh (Load A1)		L1			X	X	Relevant to 1-ph load 1
8c	kWh (Load A1)		L2			X	X	Relevant to 1-ph load 2
8d	kWh (Load A1)		L3			X	X	Relevant to 1-ph load 3
8e	kW L1(Load A1)	kW L2	kW L3			X	X	Relevant to 1-ph load 1, 2, 3
9a	dMd (Load A1)		kW (Load A1)	X	X			
9b	dMd L1 (Load A1)		kW (Load A1 L1)			X	X	Relevant to 1-ph load 1
9c	dMd L2 (Load A1)		kW (Load A1 L2)			X	X	Relevant to 1-ph load 2
9d	dMd L3 (Load A1)		kW (Load A1 L3)			X	X	Relevant to 1-ph load 3
10a	Pd (Load A1)		kW (Load A1)	X	X			Md = maximum demand
10b	Pd L1 (Load A1)		kW (Load A1 L1)			X	X	Relevant to 1-ph load 1
10c	Pd L2 (Load A1)		kW (Load A1 L2)			X	X	Relevant to 1-ph load 2
10d	Pd L3 (Load A1)		kW (Load A1 L3)			X	X	Relevant to 1-ph load 3
11	A L1 (Load A1)	A L2 (Load A1)	A L3 (Load A1)	X	X	X	X	In case of system 3P: load 1 single phase currents. In case of system 1P AL1 is the current of 1-ph load 1, AL2 of load 2, AL3 of load 3.
12	kvarh		kvar (Load A1)	X	X			
13	dMd		kVA (Load A1)	X	X			
14	Pd		kVA (Load A1)	X	X			Pd = maximum (peak) demand
15a	kWh (Load A2)		kW (Load A2)	X				



## Display pages (cont.)

No	A (1st line)	B (1st line)	(2nd line)	SYS 1.3P	SYS 2.3P	SYS 3.1P	SYS 6.P	Note
15b	kWh (Load A2)		L1			X	Relevant to 1-ph load 4	
15c	kWh (Load A2)	L2				X	Relevant to 1-ph load 5	
15d	kWh (Load A2)		L3			X	Relevant to 1-ph load 6	
15e	kW L1(Load A2)	kW L2	kW L3				X	Relevant to 1-ph load 4, 5, 6
16a	dMd (Load A2)		kW (Load A2)	X				
16b	dMd L1 (Load A2)		kW (Load A2 L1)		X	Relevant to 1-ph load 4		
16c	dMd L2 (Load A2)		kW (Load A2 L2)		X	Relevant to 1-ph load 5		
16d	dMd L3 (Load A2)		kW (Load A2 L3)		X	Relevant to 1-ph load 6		
17a	Pd (Load A2)		kW (Load A2)	X			Md = maximum demand	
17b	Pd L1 (Load A2)	kW (Load A2 L1)			X	Relevant to 1-ph load 4		
17c	Pd L2 (Load A2)		kW (Load A2 L2)		X	Relevant to 1-ph load 5		
17d	Pd L3 (Load A2)		kW (Load A2 L3)		X	Relevant to 1-ph load 6		
18	A L1 (Load A2)	A L2 (Load A2)	A L3 (Load A2)		X		X	In case of system 2.3P: Load 2 single phase currents. In case of system 6.1P AL1 is the current of 1-ph load 4, AL2 of load 5, AL3 of load 6.
19	kvarh		kvar (Load A2)		X			
20	dMd		kVA (Load A2)		X			
21	Md		kVA (Load A2)		X			Md = max. demand
22	V L1N (L1)	V L2N (L2)	V L3N (L3)	X	X	X	X	
23	V12 (L1)	V23 (L2)	V31 (L3+triangle)	X	X			
24	kW (LoadA1)	kW (Load A2)	kW ( $\Sigma$ )		S		S	In case of system 6.1P load 1 is the sum of 1-ph loads 1, 2, 3 and load 2 is the sum of 1-ph loads 4, 5, 6.

**Note:** whatever page the user has selected, after 120s it goes back to page 1 (if available, otherwise page 8).

**X:** available;

**S:** available only if SUM function is on;

**S1:** available only if SUM function is on but TCD phase orders are the same (both 123 or both 321, see available menu table);

**Empty:** not available.

## Additional available information on the display

Type	1st line	2nd line	Note
Meter information 1	Y. 2008	r.A0	Year of production and firmware release
Meter information 2	PuL_LEd (kWh)	[value]	kWh per pulses of the LED
Meter information 3	SYS [2.3P]		1.3P, 2.3P, 3.1P, 6.1P
Meter information 4	[value 1][value 2]**	tcd	Phase order (123 or 321) of TCD A1 and A2
Meter information 5	Ut rat.	[value]	Voltage transformer ratio
Meter information 6	Ct Prin	[value]	Current transformer primary value
Meter information 7*	PuL 1 (kWh)	[value]	Pulse output: kWh per pulse Load A1
Meter information 8*	PuL 2 (kWh)	[value]	Pulse output: kWh per pulse Load A2
Meter information 9	AddrESS	[value]	Serial communication address
Md reset	rESEtuP	no/YES	Reset of maximum demand

(\*) = in case of digital pulse output model

(\*\*) = [value 2] is "---" in case of system 1.3P or 3.1P

## Display resolution

Variable	Resolution	Range	
		From	To
Active and Apparent Power	0.1 W 1 W 0.01 kW 0.1 kW 1 kW	0.1 W 1 W 1.00 kW 10.0 kW 100 kW	99.9 W 999 W 9.99 kW 99.9 kW 999 kW
Energy (kWh and kvarh)	0.1 kWh / kvarh 1 kWh / kvarh	0.1 kWh 1 000 000 kWh	999 999.9 kWh 9 999 999 kWh
Voltage	1 V	1 V	999 V
Current	0.01 A 0.1 A 1 A	0.01 A 10.0 A 1A	9.99 A 99.9 A 999 A

## Error message management

Description	Display message
1st load CT not connected	[load 1] MISSInG tcd
2nd load CT enabled (systems 2.3P or 6.1P) but not connected	[load 2] MISSInG tcd
1st and 2nd loads CT not connected	[load 1] [load 2] MISSInG tcd
2nd load CT enabled (systems 2.3P or 6.1P) but having a different primary current than 1st load CT	[load 2] WrOnG tcd
Over-range condition of the measuring inputs (voltage and current)	E E E

## List of available menus

Always available		Selection	Default setting
PASS ?	Password	From 0 to 999	0
PASS ? (100)	"rESEt UP" Reset of the max value of Wdmd and VAdmd (only for Total)	no / YES	No
CnG¬_PASS	New Password	From 0 to 999	0
SYS	3-phase (3- or 4-wire). Management of one 3-phase load.	1.3P	1.3P
	3-phase (3- or 4-wire). Management of two 3-phase loads.	2.3P	
	1-phase (2-wire). Management of three 1-phase load.	3.1P	
	1-phase (2-wire). Management of six 1-phase loads.	6.1P	
SuM (**)	SUM function	On/OFF	On
EC (****)	Easy connection function	On/OFF	OFF
tCd A1 (***)	1st TCD phase order	123/321	123
tCd A2 (***)	2nd TCD phase order	123/321	123
P.int ti	Integration time for "dmd" power calculation	From 1 to 60 min	15
Ut	VT ratio	1.0 to 99.9 / 100 to 999	1.0
PuL 1 (*)	Number of kWh per pulse Load A1	From 0.01 to 9.99	0.1
PuL 2 (*) (**)	Number of kWh per pulse Load A2	From 0.01 to 9.99	0.1
t.on (*)	TON time (milliseconds)	40 or 100ms	100
AddrESS	Modbus address of the instrument	From 1 to 247	1
bAud	Modbus baud rate	9.6, 19.2, 38.4 kbps	9.6
PARtY	Modbus parity	No, EvEn	No
EnE PA.rE	Reset of the Load A1 and Load A2 energies (6 load in 1-phase system)	no / YES	No
EnE to.rE	Reset of the total energy	no / YES	No


(\*) = in case of digital pulse output, only 3-phase systems. In 1-phase system the pulse is relevant to the sum of the first three and second three 1-phase loads.

(\*\*) = not present in case of 1.3P


(\*\*\*) = in case the phase order in one or both the TCD is not the same shown in the wiring diagram, it is possible to swap the phase order (from L1, L2, L3 to L3, L2, L1). If the phase order is not the same and SUM function is enabled, the current SUM page is not available.

(\*\*\*\*) = in case of Easy connection disabled and imported power: A, kW are to be shown with negative sign; only kWh is not integrated; the negative instantaneous contribution to Wdmd calculation is not considered. In all the cases kvar is displayed with the actual sign.

## Tamper proof capability

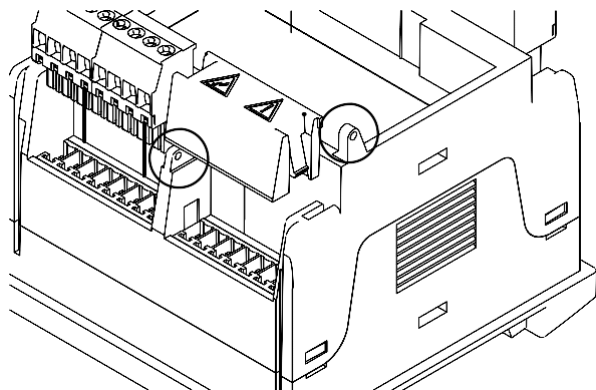


### Position of the seals

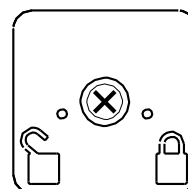


Rear view of the detached display unit with highlight of the programming lock.

## Wiring diagrams


### 3-ph. system type selection 1.3P

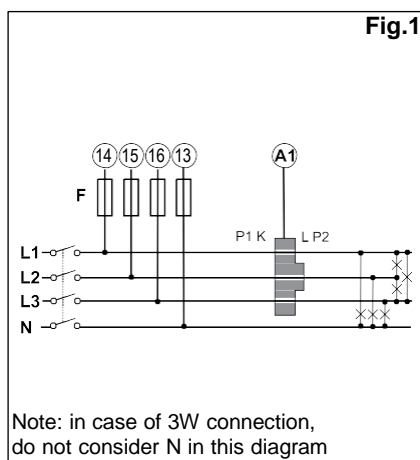


**3-phase system type selection: 2.3P**

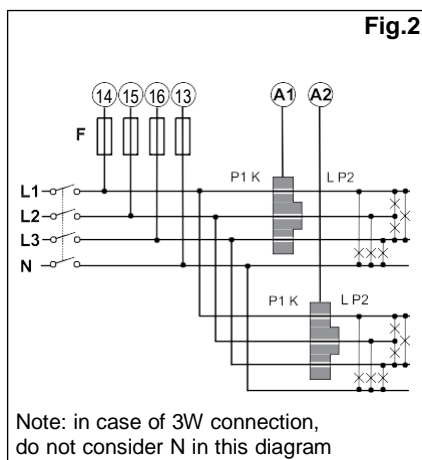



**1-phase system type selection: 3.1P**

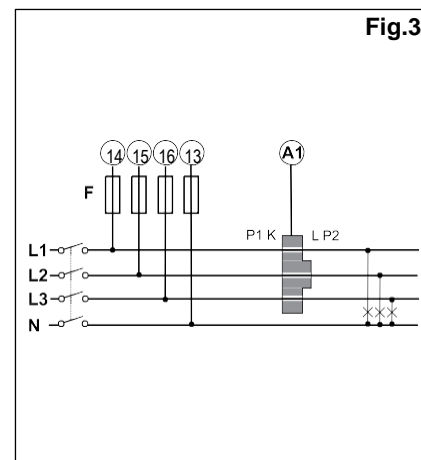


**1-phase system type selection: 6.1P**

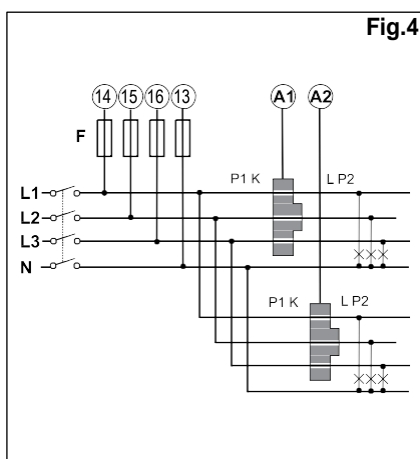



## Loom example

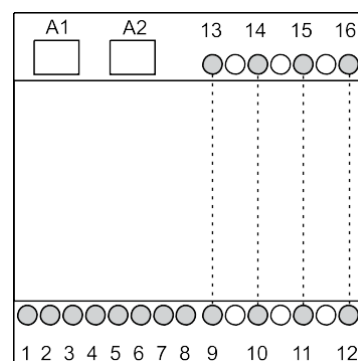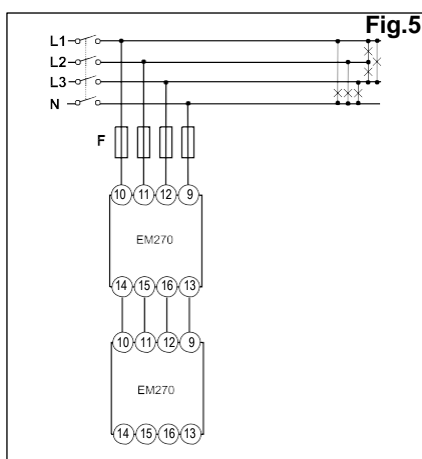



## Current connections

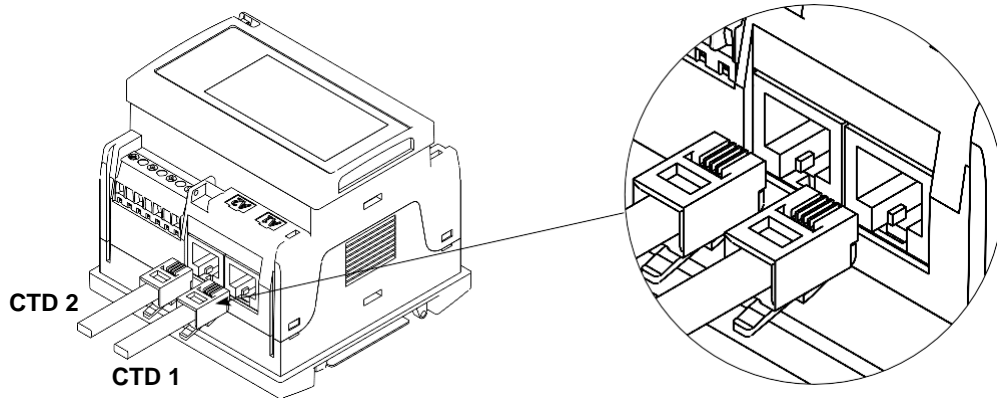


## Static output connections

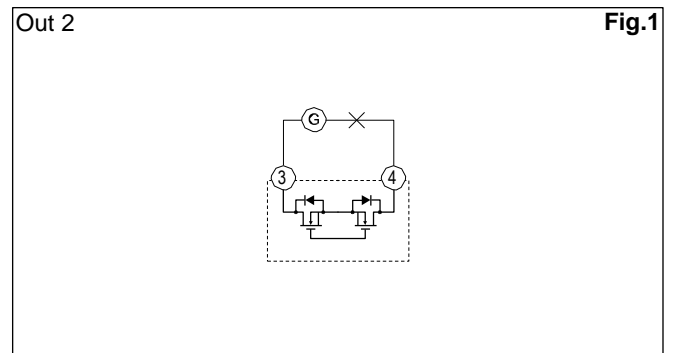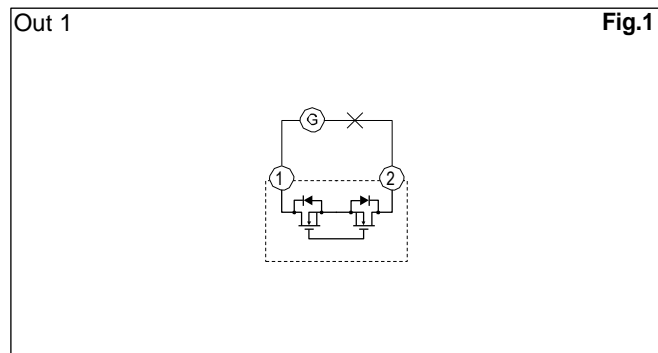

## RS485 Serial Port

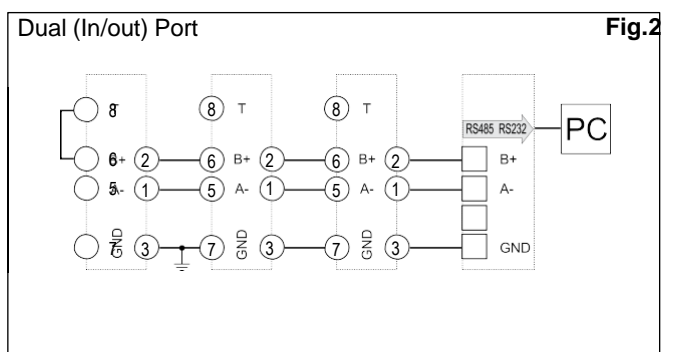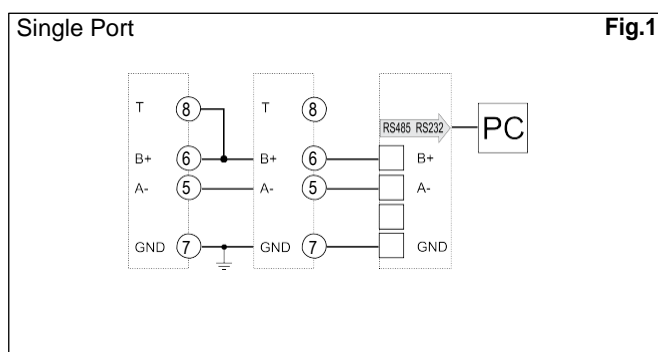

Front panel description

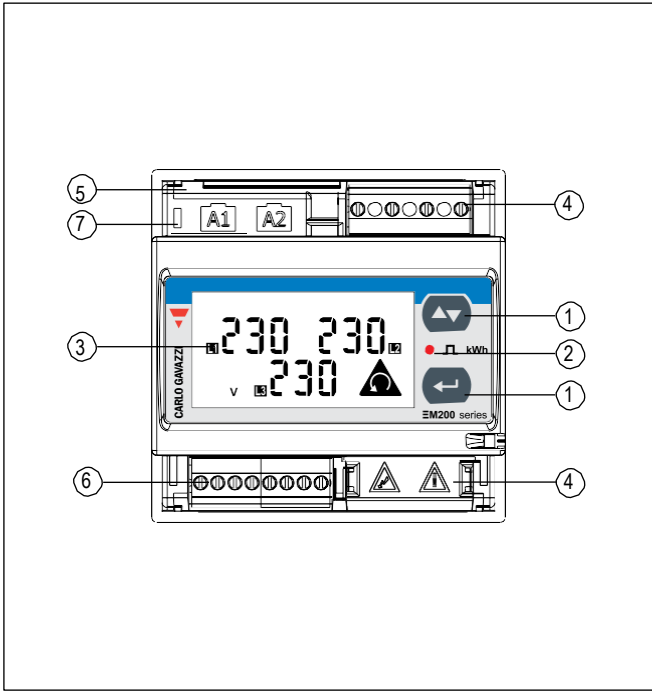

- 1. Keypad**  
2 push-buttons to program the configuration parameters and scroll the variables on the display
- 2. LED**  
Red LED blinking proportional to the total active energy being measured (Total= Load A1 + Load A2).
- 3. Display**  
LCD-type with alphanumeric indications to:
  - display configuration parameters;
  - display all the measured variables.
- 4. Detachable voltage screw terminals**  
Detachable screw terminal blocks for voltage wiring.  
NOTE: max 20 EM270 connected in cascade. No other loads can be connected to voltage terminals.
- 5. Current RJ11 connectors**  
RJ11 connectors (female) for quick connection to up to two CT accessories.
- 6. RS485 or pulse screw terminals**  
Detachable screw terminal blocks for quick connection in daisy chain of the serial RS485 line or for connection if the 2 independent pulse output.
- 7. Power-On LED**  
Green LED lit when power supply is available.

Dimensions and panel cut-out (mm)

