



EM530-EM540

Modbus

**MODBUS COMMUNICATION
PROTOCOL**

Public version

Version 1.11

August 7th, 2025

Index

| | |
|--|-----------|
| 1. Introduction | 3 |
| 2. Modbus functions | 3 |
| 2.1 Function 03h (Read Holding Registers)..... | 4 |
| 2.2 Function 04h (Read Input Registers)..... | 5 |
| 2.3 Function 06h (Write Single Holding Register)..... | 6 |
| 2.4 Function 10h (Write multiple registers)..... | 7 |
| 2.5 Broadcast mode..... | 8 |
| 2.6 Application notes, RS485 general considerations..... | 8 |
| 2.7 Modbus timing..... | 8 |
| 3. Data Format, Variables and param | 9 |
| 3.1 Data format representation In Carlo Gavazzi instruments | 9 |
| 3.2 Geometric representation..... | 9 |
| 3.3 Maximum electrical values | 10 |
| 3.4 Part number available | 10 |
| 4. Table | 11 |
| 4.1 Instantaneous variables and meters (grouped by variable type)..... | 11 |
| 4.1.1 <i>Instantaneous variables and meters (grouped by variable type)</i> | 11 |
| 4.1.2 <i>Instantaneous variables and meters (grouped by phase)</i> | 14 |
| 4.1.3 <i>Other Instantaneous variables and meters (read only)</i> | 16 |
| 4.2 Parameter and information..... | 17 |
| 4.2.1 <i>Firmware version and revision code</i> | 17 |
| 4.2.2 <i>Carlo Gavazzi Controls identification code</i> | 17 |
| 4.2.3 <i>Password configuration menu</i> | 17 |
| 4.2.4 <i>System configuration menu</i> | 17 |
| 4.2.5 <i>Current inputs configuration menu (only for AV5 and MV5 models)</i> | 18 |
| 4.2.6 <i>DMD time calculation</i> | 18 |
| 4.2.7 <i>Output, Alarm and Pulse Output configuration</i> | 19 |
| 4.2.8 <i>Tariff enabling</i> | 19 |
| 4.2.9 <i>Measure mode</i> | 20 |
| 4.2.10 <i>Wrong Connection</i> | 20 |
| 4.2.11 <i>Wizard display configuration</i> | 20 |
| 4.2.12 <i>Hour counter configuration</i> | 20 |
| 4.2.13 <i>Phase – Terminal Block configuration</i> | 21 |
| 4.2.14 <i>Digital input and Active Tariff selection</i> | 22 |
| 4.2.15 <i>Pages filter, Screen Saver and Home Page</i> | 22 |



| | | |
|-----------|---------------------------------|-----------|
| 4.3 | Serial port configuration | 25 |
| 4.4 | Reset commands | 25 |
| 4.5 | Offset | 27 |
| 4.6 | Serial number..... | 28 |
| 4.7 | Secondary Address..... | 29 |
| 4.8 | Device state | 29 |
| 5. | Revisions..... | 30 |

1. Introduction

The RS485 serial interface supports the Modbus (RTU) protocol. In this document only the information necessary to read/write from/to EM500 has been reported (not all the parts of the protocol have been implemented).

For a complete description of the Modbus protocol, please refer to the latest revision of the “Modbus_Application_Protocol” document that is downloadable from the www.modbus.org web site.

2. Modbus functions

These functions are available on EM500 SERIES:

- Reading of n “Holding Registers” (code 03h),
- Reading of n “Input Register” (code 04h),
- Writing of one “Holding Registers” (code 06h),
- Writing of one “Holding Registers” (code 10h),
- Broadcast mode (writing instruction on address 00h).

IMPORTANT:

- In this document the “Modbus address” field is indicated in two modes:
 - **“Modicom address”**: it is the “6-digit Modicom” representation with Modbus function code 04 (Read Input Registers). It is possible to read the same values with function code 03 (Read Holding Registers) replacing the first digit (“3”) with the number “4”.
 - **“Physical address”**: it is the “word address” value to be included in the communication frame.
- The functions 03h and 04h have exactly the same effect and can be used indifferently.
- The communication parameters are to be set according to the configuration of the instrument.

2.1 Function 03h (Read Holding Registers)

This function is used to read the contents of a contiguous block of holding registers (word). The Request frame specifies the starting register address and the number of registers to be read. It is possible to read maximum 125 registers (words) [250 bytes] with a single request.

The register data in the response message are packed as two bytes per register (word), with the binary contents right justified within each byte. For each register, the first byte contains the high order bits (MSB) and the second contains the low order bits (LSB).

Table 2.1 - Request frame Function 03h

| Description | Length | Value | Note |
|--|---------|---------------------|----------------------|
| Physical address | 1 byte | 1 to F7h (1 to 247) | - |
| Function code | 1 byte | 03h | - |
| Starting address | 2 bytes | 0000h to FFFFh | Byte order: MSB, LSB |
| Quantity of registers (N word) | 2 bytes | 1 to 14h (1 to 20) | Byte order: MSB, LSB |
| CRC | 2 bytes | - | - |

Table 2.2 - Response frame (correct action) Function 03h

| Description | Length | Value | Note |
|-----------------------------|-------------------|---------------------|----------------------|
| Physical address | 1 byte | 1 to F7h (1 to 247) | - |
| Function code | 1 byte | 03h | - |
| Quantity of requested bytes | 1 byte | N word * 2 | - |
| Register value | N *2 bytes | - | Byte order: MSB, LSB |
| CRC | 2 bytes | - | - |

Table 2.3 - Response frame (incorrect action) Function 03h

| Description | Length | Value | Note |
|------------------|---------|-------------------------------|--|
| Physical address | 1 byte | 1 to F7h (1 to 247) | Possible exception : 01h: illegal function 02h: illegal data address 03h: illegal data value 04h: slave device failure |
| Function code | 1 byte | 83h | |
| Exception code | 1 byte | 01h, 02h, 03h, 04h (see note) | |
| CRC | 2 bytes | - | |

2.2 Function 04h (Read Input Registers)

This function code is used to read the contents of a contiguous block of input registers (word). The Request frame specifies the starting register address and the number of registers to be read. It is possible to read maximum 125 register (word) [250 bytes] with a single request.

The register data in the response message are packed as two bytes per register (word), with the binary contents right justified within each byte. For each register, the first byte contains the high order bits (MSB) and the second contains the low order bits (LSB).

Table 2.4 - Request frame Function 04h

| Description | Length | Value | Note |
|--|---------|---------------------|----------------------|
| Physical address | 1 byte | 1 to F7h (1 to 247) | - |
| Function code | 1 byte | 04h | - |
| Starting address | 2 bytes | 0000h to FFFFh | Byte order: MSB, LSB |
| Quantity of registers (N word) | 2 bytes | 1 to 14h (1 to 20) | Byte order: MSB, LSB |
| CRC | 2 bytes | - | - |

Table 2.5 - Response frame (correct action) Function 04h

| Description | Length | Value | Note |
|-----------------------------|-------------------|---------------------|----------------------|
| Physical address | 1 byte | 1 to F7h (1 to 247) | - |
| Function code | 1 byte | 04h | - |
| Quantity of requested bytes | 1 byte | N word * 2 | - |
| Register value | N *2 bytes | - | Byte order: MSB, LSB |
| CRC | 2 bytes | - | - |

Table 2.6 - Response frame (incorrect action) Function 04h

| Description | Length | Value | Note |
|------------------|---------|---------------------|--|
| Physical address | 1 byte | 1 to F7h (1 to 247) | Possible exception : 01h: illegal function 02h: illegal data address 03h: illegal data value 04h: slave device failure |
| Function code | 1 byte | 84h | |
| Exception code | 1 byte | 01h, 02h, 03h, 04h | |
| CRC | 2 bytes | - | |

2.3 Function 06h (Write Single Holding Register)

This function code is used to write a single holding register. The Request frame specifies the address of the register (word) to be written and its content.

The correct response is an echo of the request, returned after the register content has been written.

Table 2.7 - Request frame Function 06h

| Description | Length | Value | Note |
|------------------|---------|---------------------|----------------------|
| Physical address | 1 byte | 1 to F7h (1 to 247) | - |
| Function code | 1 byte | 06h | - |
| Starting address | 2 bytes | 0000h to FFFFh | Byte order: MSB, LSB |
| Register value | 2 bytes | 0000h to FFFFh | Byte order: MSB, LSB |
| CRC | 2 bytes | - | - |

Table 2.8 - Response frame (correct action) Function 06h

| Description | Length | Value | Note |
|------------------|---------|---------------------|----------------------|
| Physical address | 1 byte | 1 to F7h (1 to 247) | - |
| Function code | 1 byte | 06h | - |
| Starting address | 2 bytes | 0000h to FFFFh | Byte order: MSB, LSB |
| Register value | 2 bytes | 0000h to FFFFh | Byte order: MSB, LSB |
| CRC | 2 bytes | - | - |

Table 2.9 - Response frame (incorrect action) Function 06h

| Description | Length | Value | Note |
|------------------|---------|---------------------|--|
| Physical address | 1 byte | 1 to F7h (1 to 247) | Possible exception : 01h: illegal function 02h: illegal data address 03h: illegal data value 04h: slave device failure |
| Function code | 1 byte | 86h | |
| Exception code | 1 byte | 01h, 02h, 03h, 04h | |
| CRC | 2 bytes | - | |

2.4 Function 10h (Write multiple registers)

This function code is used to write a block of contiguous registers (maximum 123 word [246 bytes]). The requested values to be written are specified in the request data field. Data is packed as two bytes per register. The correct response returns the function code, starting address, and the quantity of written registers.

Table 2.10 - Request frame Function 10h

| Description | Length | Value | Note |
|--------------------------------|-------------|--------------------|----------------------|
| Physical Address | 1 byte | 1 to F7 (1 to 247) | - |
| Function code | 1 byte | 10h | - |
| Starting Address | 2 bytes | 0000h to FFFFh | Byte order: MSB, LSB |
| Quantity of Registers (N word) | 2 bytes | 0001h to 0078h | Byte order: MSB, LSB |
| Byte count | 1 byte | N word * 2 | - |
| Register value | N * 2 bytes | value | Byte order: MSB, LSB |
| CRC | 2 bytes | - | - |

Table 2.11 - Response frame (correct action) Function 10h

| Description | Length | Value | Note |
|--------------------------------|---------|--------------------|----------------------|
| Physical Address | 1 byte | 1 to F7 (1 to 247) | - |
| Function code | 1 byte | 10h | - |
| Starting Address | 2 bytes | 0000h to FFFFh | Byte order: MSB, LSB |
| Quantity of Registers (N word) | 2 bytes | 0001h to 0078h | Byte order: MSB, LSB |
| CRC | 2 bytes | - | - |

Table 2.12 - Response frame (Incorrect action) Function 10h

| Description | Length | Value | Note |
|------------------|---------|--------------------|---|
| Physical Address | 1 byte | 1 to F7 (1 to 247) | Possible exception: 01h: illegal function 02h: illegal data address 03h: illegal data value 04h: slave device failure |
| Function code | 1 byte | 90h | |
| Exception code | 1 byte | 01h, 02h, 03h, 04h | |
| CRC | 2 bytes | - | |

2.5 Broadcast mode

In broadcast mode the master can send a request (command) to all the slaves. No response is returned to broadcast requests sent by the master. It is possible to send the broadcast message only with function code 06h and 10h using address 00h.

2.6 Application notes, RS485 general considerations

- To avoid errors due to the signal reflections or line coupling, it is necessary to terminate the bus at the beginning (master side, if not already embedded, by inserting a 120 ohm 1/2W 5% resistor between line B and A) and at the end (in EM500 interface by connecting the terminal B+ with the terminal T in the last instrument).
- The network termination is necessary even in case of point-to-point connection and/or of short distances.
- For connections longer than 1000m or if in the network there are more than 160 instruments (with 1/5 unit load as used in EM500 interface), a signal repeater is necessary.
- For bus connection it is suggested to use an AWG24 balanced pair cable and to add a third wire for GND connection. If a shielded cable is used, connect the shield to GND.
- The GND should be connected to ground only at the host side.
- If an instrument does not answer within the “max answering time”, it is necessary to repeat the query. If the instrument does not answer after 2 or 3 consecutive queries, it is to be considered as not connected, faulty or reached with a wrong address. The same consideration is valid in case of CRC errors or incomplete response frames.

2.7 Modbus timing

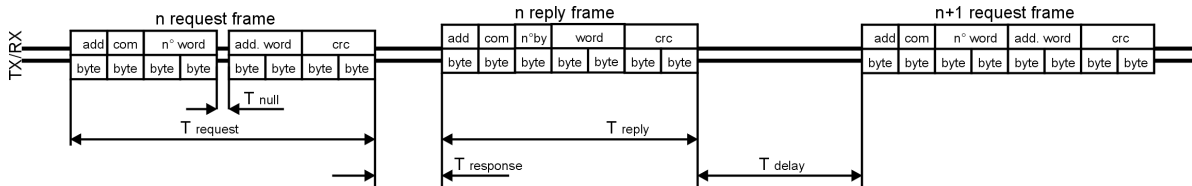


Fig. 1 : 2-wire timing diagram

Table 2.13 - Timing of reading function

| Timing characteristics of reading function: | ms |
|--|----------|
| T response: Max answering time | 500 ms |
| T response: Typical answering time | 40 ms |
| T delay: Minimum time before a new query | 3.5 char |
| T null: Max interruption time during the request frame | 2.5 char |

3. Data Format, Variables and param

3.1 Data format representation In Carlo Gavazzi instruments

The variables are represented by integers or floating numbers, with 2's complement notation in case of "signed" format, using the following:

Table 3.1 - Data format representation


| Format | IEC data type | Description | Bits | Range |
|------------|---------------|---------------------------------|------|--|
| INT16 | INT | Integer | 16 | - 32768 .. 32767 |
| UINT16 | UINT | Unsigned integer | 16 | 0 .. 65535 |
| INT32 | DINT | Double integer | 32 | - 2 ³¹ .. 2 ³¹ |
| UINT32 | UDINT | Unsigned double integer | 32 | 0 .. 2 ³²⁻¹ |
| UINT64 | ULINT | Unsigned long integer | 64 | 0 .. 2 ⁶⁴⁻¹ |
| IEEE754 SP | - | Single-precision floating-point | 32 | - (1 + [1 - 2 ⁻²³]) x 2 ¹²⁷ .. 2 ¹²⁸ |

For all the formats the byte order (inside the single word) is MSB->LSB. In INT32, UINT32 and UINT64 formats, the word order is LSW-> MSW.

3.2 Geometric representation

According to the signs of the power factor, the active power P and the reactive power Q, it is possible to obtain a geometric representation of the power vector, as indicated in the drawing below, according to EN 60253-23:

Table 3.2 - Geometric representation of variables

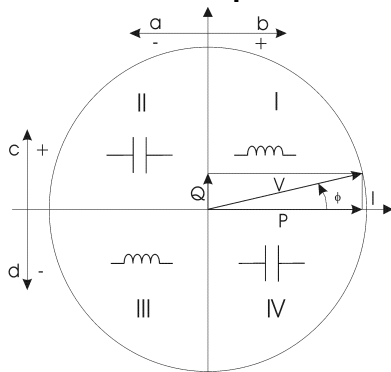

- a = Exported active power
- b = Imported active power
- c = Imported reactive power
- d = Exported reactive power

According to the measurement mode, the following sign convention is used.

- P < or > 0 (with indication of "-" sign)
- kWh+ increasing only when P > 0
- kWh- increasing only when P < 0
- kvarh+ increasing only when Q > 0
- kvarh- increasing only when Q < 0
- PF with ±C or ±L indication

3.3 Maximum electrical values

If the input is above the maximum value, the display shows “EEE”.

The overflow indication “EEE” is displayed when the MSW value of the relevant variable is 7FFFh.

3.4 Part number available

| Part Number | Family | SubFamily | Gavazzi Code | | FW | Note |
|--------------------|--------|-----------|----------------|--------------|-----|---|
| | | | Decimal Format | Hex16 format | | |
| EM530DINAV53XS1X | EM530 | X | 1744 | 06D0 | X | EM530 with RS485, standard device |
| EM530DINAV53XS1PFA | EM530 | PFA | 1745 | 06D1 | PFx | EM530 with RS485, MID Absolute Counter |
| EM530DINAV53XS1PFB | EM530 | PFB | 1746 | 06D2 | PFx | EM530 with RS485, MID Counter PFB |
| EM530DINAV53XS1PFC | EM530 | PFC | 1747 | 06D3 | PFx | EM530 with RS485, MID Counter PFC |
| EM530DINAV53XS1PFD | EM530 | PFD | 1749 | 06D5 | - | EM530 with RS485, Bidirectional MID Counter similar PFB |
| EM530DINAV53XS1PFE | EM530 | PFE | 1750 | 06D6 | - | EM530 with RS485, Bidirectional MID Counter similar PFC |
| EM530DINMV53XS1X | EM530 | X | 1856 | 0740 | - | EM530-MV with RS485, standard device |
| EM530DINRG53XS1X | EM530 | X | 2096 | 0830 | - | EM530-RG with RS485, standard device |
| EM540DINAV23XS1X | EM540 | X | 1760 | 06E0 | X | EM540 with RS485, standard device |
| EM540DINAV23XS1PFA | EM540 | PFA | 1761 | 06E1 | PFx | EM540 with RS485, MID Absolute Counter |
| EM540DINAV23XS1PFB | EM540 | PFB | 1762 | 06E2 | PFx | EM540 with RS485, MID Counter PFB |
| EM540DINAV23XS1PFC | EM540 | PFC | 1763 | 06E3 | PFx | EM540 with RS485, MID Counter PFC |
| EM540DINAV23XS1PFD | EM540 | PFD | 1765 | 06E5 | - | EM540 with RS485, Bidirectional MID Counter similar PFB |
| EM540DINAV23XS1PFE | EM540 | PFE | 1766 | 06E6 | - | EM540 with RS485, Bidirectional MID Counter similar PFC |

Protocol ID shall be used into Modbus map to distinguish the differences between models. If registers are available for every model the FW code shall be substituted with ALL.

IMPORTANT:

- Reading values in addresses not specified in the below tables returns an illegal data address exception;
- writing is not inhibited while user interface is inside a menu, so the last command takes place (display save or serial communication).

4. Table

4.1 Instantaneous variables and meters (grouped by variable type)

4.1.1 Instantaneous variables and meters (grouped by variable type)

Table 4.1 - Modbus: read only mode with functions code 03 and 04

| Modicom address | Physical address | Length (words) | VARIABLE ENG. UNIT | Data Format | Notes |
|-----------------|------------------|----------------|--------------------|-------------|---|
| 300001 | 0000h | 2 | V L1-N | INT32 | Value weight: Volt*10 |
| 300003 | 0002h | 2 | V L2-N | INT32 | |
| 300005 | 0004h | 2 | V L3-N | INT32 | |
| 300007 | 0006h | 2 | V L1-L2 | INT32 | |
| 300009 | 0008h | 2 | V L2-L3 | INT32 | |
| 300011 | 000Ah | 2 | V L3-L1 | INT32 | Value weight: Ampere*1000 |
| 300013 | 000Ch | 2 | A L1 | INT32 | |
| 300015 | 000Eh | 2 | A L2 | INT32 | |
| 300017 | 0010h | 2 | A L3 | INT32 | Value weight: Watt*10 |
| 300019 | 0012h | 2 | W L1 | INT32 | |
| 300021 | 0014h | 2 | W L2 | INT32 | |
| 300023 | 0016h | 2 | W L3 | INT32 | Value weight: VA*10 |
| 300025 | 0018h | 2 | VA L1 | INT32 | |
| 300027 | 001Ah | 2 | VA L2 | INT32 | |
| 300029 | 001Ch | 2 | VA L3 | INT32 | Value weight: var*10 |
| 300031 | 001Eh | 2 | var L1 | INT32 | |
| 300033 | 0020h | 2 | var L2 | INT32 | |
| 300035 | 0022h | 2 | var L3 | INT32 | Value weight: Volt*10 |
| 300037 | 0024h | 2 | V L-N sys | INT32 | |
| 300039 | 0026h | 2 | V L-L sys | INT32 | Value weight: Watt*10 |
| 300041 | 0028h | 2 | W sys | INT32 | |
| 300043 | 002Ah | 2 | VA sys | INT32 | Value weight: VA*10 |
| 300045 | 002Ch | 2 | var sys | INT32 | Value weight: var*10 |
| 300047 | 002Eh | 1 | PF L1 | INT16 | Negative values correspond to exported active power, positive values correspond to imported active power. For L (inductive)/C (capacitive) load indications, see 76h to 79h registers) Value weight: PF*1000 |
| 300048 | 002Fh | 1 | PF L2 | INT16 | |
| 300049 | 0030h | 1 | PF L3 | INT16 | |
| 300050 | 0031h | 1 | PF sys | INT16 | |
| 300051 | 0032h | 1 | Phase sequence | INT16 | The value -1 corresponds to L1-L3-L2 sequence, the value 1 corresponds to L1-L2-L3 sequence. The phase sequence value is meaningful only in a 3-phase system |
| 300052 | 0033h | 1 | Hz | INT16 | Value weight: Hz*10 |
| 300053 | 0034h | 2 | kWh (+) TOT | INT32 | Value weight: kWh*10 |
| 300055 | 0036h | 2 | kvarh (+) TOT | INT32 | Value weight: kvarh*10 |
| 300057 | 0038h | 2 | W sys DMD | INT32 | Value weight: Watt*10 |
| 300059 | 003Ah | 2 | W sys DMD MAX | INT32 | Value weight: Watt*10 |
| 300061 | 003Ch | 2 | kWh (+) PARTIAL | INT32 | Value weight: kWh*10 |
| 300063 | 003Eh | 2 | kvarh (+) PARTIAL | INT32 | Value weight: kvarh*10 |
| 300065 | 0040h | 2 | kWh (+) L1 | INT32 | Value weight: kWh*10 |
| 300067 | 0042h | 2 | kWh (+) L2 | INT32 | Value weight: kWh*10 |
| 300069 | 0044h | 2 | kWh (+) L3 | INT32 | Value weight: kWh*10 |
| 300071 | 0046h | 2 | kWh (+) t1. | INT32 | Value weight: kWh*10 |
| 300073 | 0048h | 2 | kWh (+) t2. | INT32 | Value weight: kWh*10 |
| 300075 | 004Ah | 2 | n.a. | INT32 | Not available, value =0 |
| 300077 | 004Ch | 2 | n.a. | INT32 | Not available, value =0 |
| 300079 | 004Eh | 2 | kWh (-) TOT | INT32 | Value weight: kWh*10 |
| 300081 | 0050h | 2 | kvarh (-) TOT | INT32 | Value weight: kvarh*10 |
| 300083 | 0052h | 2 | kWh (-) PARTIAL | INT32 | Value weight: kWh*10 |



| | | | | | |
|--------|-------|---|-----------------------------------|-------|--|
| 300085 | 0054h | 2 | kvarh (-) PARTIAL | INT32 | Value weight: kvarh*10 |
| 300087 | 0056h | 2 | kVAh TOT | INT32 | Value weight: kVAh*10 |
| 300089 | 0058h | 2 | kVAh PARTIAL | INT32 | Value weight: kVAh*10 |
| 300091 | 005Ah | 2 | Run hour meter | INT32 | Value weight: hours*100 |
| 300093 | 005Ch | 2 | Run hour meter kWh (-) | INT32 | Value weight: hours*100 |
| 300095 | 005Eh | 2 | n.a. | INT32 | Not available, value =0 |
| 300097 | 0060h | 2 | n.a. | INT32 | Not available, value =0 |
| 300099 | 0062h | 2 | n.a. | INT32 | Not available, value =0 |
| 300101 | 0064h | 2 | n.a. | INT32 | Not available, value =0 |
| 300103 | 0066h | 2 | n.a. | INT32 | Not available, value =0 |
| 300105 | 0068h | 2 | n.a. | INT32 | Not available, value =0 |
| 300107 | 006Ah | 2 | n.a. | INT32 | Not available, value =0 |
| 300109 | 006Ch | 2 | n.a. | INT32 | Not available, value =0 |
| 300111 | 006Eh | 2 | Run hour meter PARTIAL | INT32 | Value weight: hours*100 |
| 300113 | 0070h | 2 | Run hour meter kWh (-) PARTIAL | INT32 | Value weight: hours*100 |
| 300115 | 0072h | 1 | PF L1** | INT16 | ** Negative values correspond to lead (C), positive values correspond to lag (L). Value weight: PF*1000 |
| 300116 | 0073h | 1 | PF L2** | INT16 | |
| 300117 | 0074h | 1 | PF L3** | INT16 | |
| 300118 | 0075h | 1 | PF sys** | INT16 | |
| 300119 | 0076h | 1 | Inductive/Capacitive Load phase 1 | INT16 | L=+1, C = -1 |
| 300120 | 0077h | 1 | Inductive/Capacitive Load phase 2 | INT16 | L=+1, C = -1 |
| 300121 | 0078h | 1 | Inductive/Capacitive Load phase 3 | INT16 | L=+1, C = -1 |
| 300122 | 0079h | 1 | Inductive/Capacitive Load sys | INT16 | L=+1, C = -1 |
| 300123 | 007Ah | 2 | n.a. | INT32 | Not available, value =0 |
| 300125 | 007Ch | 2 | n.a. | INT32 | Not available, value =0 |
| 300127 | 007Eh | 2 | n.a. | INT32 | Not available, value =0 |
| 300129 | 0080h | 2 | n.a. | INT32 | Not available, value =0 |
| 300131 | 0082h | 2 | THD A L1 | INT32 | Value weight: %*100 |
| 300133 | 0084h | 2 | THD A L2 | INT32 | Value weight: %*100 |
| 300135 | 0086h | 2 | THD A L3 | INT32 | Value weight: %*100 |
| 300137 | 0088h | 2 | n.a. | INT32 | Not available, value =0 |
| 300139 | 008Ah | 2 | THD V L1-N | INT32 | Value weight: %*100 |
| 300141 | 008Ch | 2 | THD V L2-N | INT32 | Value weight: %*100 |
| 300143 | 008Eh | 2 | THD V L3-N | INT32 | Value weight: %*100 |
| 300145 | 0090h | 2 | n.a. | INT32 | Not available, value =0 |
| 300147 | 0092h | 2 | THD V L1-L2 | INT32 | Value weight: %*100 |
| 300149 | 0094h | 2 | THD V L2-L3 | INT32 | Value weight: %*100 |
| 300151 | 0096h | 2 | THD V L3-L1 | INT32 | Value weight: %*100 |
| 300153 | 0098h | 2 | An | INT32 | Value weight: Ampere*1000 |
| 300155 | 009Ah | 2 | I1 DMD | INT32 | Value weight: Ampere*1000 |
| 300157 | 009Ch | 2 | I2 DMD | INT32 | Value weight: Ampere*1000 |
| 300159 | 009Eh | 2 | I3 DMD | INT32 | Value weight: Ampere*1000 |
| 300161 | 00A0h | 2 | I1 DMDMAX | INT32 | Value weight: Ampere*1000 |
| 300163 | 00A2h | 2 | I2 DMDMAX | INT32 | Value weight: Ampere*1000 |
| 300165 | 00A4h | 2 | I3 DMDMAX | INT32 | Value weight: Ampere*1000 |
| 300167 | 00A6h | 2 | n.a. | INT32 | Not available, value =0 |
| 300169 | 00A8h | 2 | n.a. | INT32 | Not available, value =0 |
| 300171 | 00AAh | 2 | n.a. | INT32 | Not available, value =0 |
| 300173 | 00ACh | 2 | W1 DMD | INT32 | Value weight: Watt*10 |
| 300175 | 00AEh | 2 | W2 DMD | INT32 | Value weight: Watt*10 |

| | | | | | |
|--------|-------|---|---------------|-------|-------------------------|
| 300177 | 00B0h | 2 | W3 DMD | INT32 | Value weight: Watt*10 |
| 300179 | 00B2h | 2 | W1 DMDMAX | INT32 | Value weight: Watt*10 |
| 300181 | 00B4h | 2 | W2 DMDMAX | INT32 | Value weight: Watt*10 |
| 300183 | 00B6h | 2 | W3 DMDMAX | INT32 | Value weight: Watt*10 |
| 300185 | 00B8h | 2 | n.a. | INT32 | Not available, value =0 |
| 300187 | 00BAh | 2 | n.a. | INT32 | Not available, value =0 |
| 300189 | 00BCh | 2 | n.a. | INT32 | Not available, value =0 |
| 300191 | 00BEh | 2 | W sys DMD | INT32 | Value weight: Watt*10 |
| 300193 | 00C0h | 2 | W sys DMD MAX | INT32 | Value weight: Watt*10 |
| 300195 | 00C2h | 2 | n.a. | INT32 | Not available, value =0 |
| 300197 | 00C4h | 2 | n.a. | INT32 | Not available, value =0 |
| 300199 | 00C6h | 2 | n.a. | INT32 | Not available, value =0 |
| 300201 | 00C8h | 2 | n.a. | INT32 | Not available, value =0 |
| 300203 | 00CAh | 2 | n.a. | INT32 | Not available, value =0 |
| 300205 | 00CCh | 2 | n.a. | INT32 | Not available, value =0 |
| 300207 | 00CEh | 2 | n.a. | INT32 | Not available, value =0 |
| 300209 | 00D0h | 2 | n.a. | INT32 | Not available, value =0 |
| 300211 | 00D2h | 2 | n.a. | INT32 | Not available, value =0 |
| 300213 | 00D4h | 2 | n.a. | INT32 | Not available, value =0 |
| 300215 | 00D6h | 2 | VA DMD | INT32 | Value weight: VA*10 |
| 300217 | 00D8h | 2 | VA DMD MAX | INT32 | Value weight: VA*10 |
| 300219 | 00DAh | 2 | n.a. | INT32 | Not available, value =0 |

4.1.2 Instantaneous variables and meters (grouped by phase)

Table 4.2 - Modbus: read only mode with functions code 03 and 04

| Modicom address | Physical address | Length (words) | VARIABLE ENG. UNIT | Data Format | Notes |
|-------------------------------------|------------------|----------------|------------------------|-------------|--|
| System variables | | | | | |
| 300247 | 00F6h | 2 | Run hour meter kWh (-) | INT32 | Value weight: hours*100 |
| 300249 | 00F8h | 2 | An | INT32 | Value weight: Ampere*1000 |
| 300251 | 00FAh | 2 | n.a. | INT32 | Not available, value =0 |
| 300253 | 00FCh | 2 | n.a. | INT32 | Not available, value =0 |
| 300255 | 00FEh | 2 | Run hour meter | INT32 | Value weight: hours*100 |
| 300257 | 0100h | 2 | n.a. | INT32 | Not available, value =0 |
| 300259 | 0102h | 2 | V L-N sys | INT32 | Value weight: Volt*10 |
| 300261 | 0104h | 2 | V L-L sys | INT32 | Value weight: Volt*10 |
| 300263 | 0106h | 2 | W sys | INT32 | Value weight: Watt*10 |
| 300265 | 0108h | 2 | VA sys | INT32 | Value weight: VA*10 |
| 300267 | 010Ah | 2 | var sys | INT32 | Value weight: var*10 |
| 300269 | 010Ch | 2 | PF sys | INT32 | (See 31h register note). Value weight: PF*1000 |
| 300271 | 010Eh | 2 | Phase sequence | INT32 | The value -1 corresponds to L1-L3-L2 sequence, the value 1 corresponds to L1-L2-L3 sequence. The phase sequence value is meaningful only in a 3-phase system |
| 300273 | 0110h | 2 | Hz | INT32 | Value weight: Hz*10 |
| Total energies and DMD power | | | | | |
| 300275 | 0112h | 2 | kWh (+) TOT | INT32 | Value weight: kWh*10 |
| 300277 | 0114h | 2 | kvarh (+) TOT | INT32 | Value weight: kvarh*10 |
| 300279 | 0116h | 2 | kWh (-) TOT | INT32 | Value weight: kWh*10 |
| 300281 | 0118h | 2 | kvarh (-) TOT | INT32 | Value weight: kvarh*10 |
| 300282 | 0119h | 1 | n.a. | INT32 | Not available, value =0 |
| 300283 | 011Ah | 2 | W sys DMD | INT32 | Value weight: Watt*10 |
| 300285 | 011Ch | 2 | W sys DMD MAX | INT32 | Value weight: Watt*10 |
| Phase 1 variables | | | | | |
| 300287 | 011Eh | 2 | V L1-L2 | INT32 | Value weight: Volt*10 |
| 300289 | 0120h | 2 | V L1-N | INT32 | Value weight: Volt*10 |
| 300291 | 0122h | 2 | A L1 | INT32 | Value weight: Ampere*1000 |
| 300293 | 0124h | 2 | W L1 | INT32 | Value weight: Watt*10 |
| 300295 | 0126h | 2 | VA L1 | INT32 | Value weight: VA*10 |
| 300297 | 0128h | 2 | var L1 | INT32 | Value weight: var*10 |
| 300299 | 012Ah | 2 | PF L1 | INT32 | (See 2Eh register note). Value weight: PF*1000 |
| Phase 2 variables | | | | | |
| 300301 | 012Ch | 2 | V L2-L3 | INT32 | Value weight: Volt*10 |
| 300303 | 012Eh | 2 | V L2-N | INT32 | Value weight: Volt*10 |
| 300305 | 0130h | 2 | A L2 | INT32 | Value weight: Ampere*1000 |
| 300307 | 0132h | 2 | W L2 | INT32 | Value weight: Watt*10 |
| 300309 | 0134h | 2 | VA L2 | INT32 | Value weight: VA*10 |
| 300311 | 0136h | 2 | var L2 | INT32 | Value weight: var*10 |
| 300313 | 0138h | 2 | PF L2 | INT32 | (See 2Fh register note). Value weight: PF*1000 |
| Phase 3 variables | | | | | |
| 300315 | 013Ah | 2 | V L3-L1 | INT32 | Value weight: Volt*10 |
| 300317 | 013Ch | 2 | V L3-N | INT32 | Value weight: Volt*10 |
| 300319 | 013Eh | 2 | A L3 | INT32 | Value weight: Ampere*1000 |
| 300321 | 0140h | 2 | W L3 | INT32 | Value weight: Watt*10 |
| 300323 | 0142h | 2 | VA L3 | INT32 | Value weight: VA*10 |
| 300325 | 0144h | 2 | var L3 | INT32 | Value weight: var*10 |
| 300327 | 0146h | 2 | PF L3 | INT32 | (See 30h register note). Value weight: PF*1000 |
| Other energies | | | | | |
| 300329 | 0148h | 2 | kWh (+) PARTIAL | INT32 | Value weight: kWh*10 |

| | | | | | |
|--------|-------|---|-------------------|-------|-------------------------|
| 300331 | 014Ah | 2 | kvarh (+) PARTIAL | INT32 | Value weight: kvarh*10 |
| 300333 | 014Ch | 2 | kWh (+) L1 | INT32 | Value weight: kWh*10 |
| 300335 | 014Eh | 2 | kWh (+) L2 | INT32 | Value weight: kWh*10 |
| 300337 | 0150h | 2 | kWh (+) L3 | INT32 | Value weight: kWh*10 |
| 300339 | 0152h | 2 | kWh (+) t1 | INT32 | Value weight: kWh*10 |
| 300341 | 0154h | 2 | kWh (+) t2 | INT32 | Value weight: kWh*10 |
| 300343 | 0156h | 2 | n.a. | INT32 | Not available, value =0 |
| 300345 | 0158h | 2 | n.a. | INT32 | Not available, value =0 |
| 300347 | 015Ah | 2 | kWh (-) PARTIAL | INT32 | Value weight: kWh*10 |
| 300349 | 015Ch | 2 | kvarh (-) PARTIAL | INT32 | Value weight: kvarh*10 |
| 300351 | 015Eh | 2 | kVAh TOT | INT32 | Value weight: kVAh*10 |
| 300353 | 0160h | 2 | kVAh PARTIAL | INT32 | Value weight: kVAh*10 |
| 300355 | 0162h | 2 | n.a. | INT32 | Not available, value =0 |
| 300357 | 0164h | 2 | n.a. | INT32 | Not available, value =0 |
| 300359 | 0166h | 2 | n.a. | INT32 | Not available, value =0 |
| 300361 | 0168h | 2 | n.a. | INT32 | Not available, value =0 |
| 300363 | 016Ah | 2 | n.a. | INT32 | Not available, value =0 |
| 300365 | 016Ch | 2 | n.a. | INT32 | Not available, value =0 |
| 300367 | 016Eh | 2 | n.a. | INT32 | Not available, value =0 |
| 300369 | 0170h | 2 | n.a. | INT32 | Not available, value =0 |
| 300371 | 0172h | 2 | n.a. | INT32 | Not available, value =0 |
| 300373 | 0174h | 2 | n.a. | INT32 | Not available, value =0 |
| 300375 | 0176h | 2 | n.a. | INT32 | Not available, value =0 |
| 300377 | 0178h | 2 | n.a. | INT32 | Not available, value =0 |
| 300379 | 017Ah | 2 | n.a. | INT32 | Not available, value =0 |
| 300381 | 017Ch | 2 | n.a. | INT32 | Not available, value =0 |
| 300383 | 017Eh | 2 | n.a. | INT32 | Not available, value =0 |

Other Phase 1 variables

| | | | | | |
|--------|-------|---|-------------|-------|---------------------------|
| 300385 | 0180h | 2 | THD A L1 | INT32 | Value weight: %*100 |
| 300387 | 0182h | 2 | THD V L1-N | INT32 | Value weight: %*100 |
| 300389 | 0184h | 2 | THD V L1-L2 | INT32 | Value weight: %*100 |
| 300391 | 0186h | 2 | I1 DMD | INT32 | Value weight: Ampere*1000 |
| 300393 | 0188h | 2 | I1 DMDMAX | INT32 | Value weight: Ampere*1000 |
| 300395 | 018Ah | 2 | n.a. | INT32 | Not available, value =0 |
| 300397 | 018Ch | 2 | W1 DMD | INT32 | Value weight: Watt*10 |
| 300399 | 018Eh | 2 | W1 DMDMAX | INT32 | Value weight: Watt*10 |
| 300401 | 0190h | 2 | n.a. | INT32 | Not available, value =0 |

Other Phase 2 variables

| | | | | | |
|--------|-------|---|-------------|-------|---------------------------|
| 300403 | 0192h | 2 | THD A L2 | INT32 | Value weight: %*100 |
| 300405 | 0194h | 2 | THD V L2-N | INT32 | Value weight: %*100 |
| 300407 | 0196h | 2 | THD V L2-L3 | INT32 | Value weight: %*100 |
| 300409 | 0198h | 2 | I2 DMD | INT32 | Value weight: Ampere*1000 |
| 300411 | 019Ah | 2 | I2 DMDMAX | INT32 | Value weight: Ampere*1000 |
| 300413 | 019Ch | 2 | n.a. | INT32 | Not available, value =0 |
| 300415 | 019Eh | 2 | W2 DMD | INT32 | Value weight: Watt*10 |
| 300417 | 01A0h | 2 | W2 DMDMAX | INT32 | Value weight: Watt*10 |
| 300419 | 01A2h | 2 | n.a. | INT32 | Not available, value =0 |

Other Phase 3 variables

| | | | | | |
|--------|-------|---|-------------|-------|---------------------------|
| 300421 | 01A4h | 2 | THD A L3 | INT32 | Value weight: %*100 |
| 300423 | 01A6h | 2 | THD V L3-N | INT32 | Value weight: %*100 |
| 300425 | 01A8h | 2 | THD V L3-L1 | INT32 | Value weight: %*100 |
| 300427 | 01AAh | 2 | I3 DMD | INT32 | Value weight: Ampere*1000 |
| 300429 | 01ACh | 2 | I3 DMDMAX | INT32 | Value weight: Ampere*1000 |
| 300431 | 01AEh | 2 | n.a. | INT32 | Not available, value =0 |
| 300433 | 01B0h | 2 | W3 DMD | INT32 | Value weight: Watt*10 |
| 300435 | 01B2h | 2 | W3 DMDMAX | INT32 | Value weight: Watt*10 |
| 300437 | 01B4h | 2 | n.a. | INT32 | Not available, value =0 |



4.1.3 Other Instantaneous variables and meters (read only)

Table 4.3 - Modbus: read only mode with functions code 03 and 04

| Modicom address | Physical address | Length (words) | VARIABLE ENG. UNIT | Data Format | Notes |
|-----------------|------------------|----------------|--------------------------------|-------------|--|
| 300769 | 0300h | 1 | Digital input status | INT16 | 0 = input open 1 = input closed |
| 300770 | 0301h | 1 | Active tariff | INT16 | 0 = no-one 1 = tariff 1 2 = tariff 2 |
| 300774 | 0305h | 1 | Reserved | UINT 16 | - |
| 300775 | 0306h | 1 | Alarm status | INT16 | 0 = not active (including waiting for delay to elapse) 1 = active |
| 301279 | 04FEh | 2 | Reserved | INT32 | - |
| 301281 | 0500h | 4 | kWh (+) TOT | INT64 | Value weight: Wh |
| 301285 | 0504h | 4 | kvarh (+) TOT | INT64 | Value weight: varh |
| 301289 | 0508h | 4 | kWh (+) PARTIAL | INT64 | Value weight: Wh |
| 301293 | 050Ch | 4 | kvarh (+) PARTIAL | INT64 | Value weight: varh |
| 301297 | 0510h | 4 | kWh (+) L1 | INT64 | Value weight: Wh |
| 301301 | 0514h | 4 | kWh (+) L2 | INT64 | |
| 301305 | 0518h | 4 | kWh (+) L3 | INT64 | |
| 301309 | 051Ch | 4 | kWh (-) TOT | INT64 | Value weight: Wh |
| 301313 | 0520h | 4 | kWh (-) PARTIAL | INT64 | Value weight: Wh |
| 301317 | 0524h | 4 | kvarh (-) TOT | INT64 | Value weight: varh |
| 301321 | 0528h | 4 | kvarh (-) Partial | INT64 | Value weight: varh |
| 301325 | 052Ch | 4 | kVAh TOT | INT64 | Value weight: VAh |
| 301329 | 0530h | 4 | kVAh PARTIAL | INT64 | Value weight: VAh |
| 301333 | 0534h | 2 | Run hour meter | INT32 | Value weight: hours*100 |
| 301335 | 0536h | 2 | Run hour meter kWh (-) | INT32 | Value weight: hours*100 |
| 301337 | 0538h | 2 | Run hour meter PARTIAL | INT32 | Value weight: hours*100 |
| 301339 | 053Ah | 2 | Run hour meter kWh (-) PARTIAL | INT32 | Value weight: hours*100 |
| 301341 | 053Ch | 2 | Hz | INT32 | Value weight: Hz*1000 |
| 301343 | 053Eh | 2 | Run hour Life Counter | INT32 | Value weight: hours*100 |

IMPORTANT:

- Tables above are equivalent and includes a copy of the same variable values.
- For meters that support also 1-phase and 2-phase systems, the values relevant to phase 2 and 3 can still be read with a valid value, equal to 0.

4.2 Parameter and information

4.2.1 Firmware version and revision code

Table 4.4 - Modbus: read only mode with functions code 03 and 04 limited to a word at a time

| Modicom address | Physical address | Length [word] | VARIABLE ENG. UNIT | Data Format | Notes | Default | FW |
|-----------------|------------------|---------------|---------------------------|-------------|--|---------|-----|
| 300771 | 0302h | 1 | Major, Minor and Revision | UINT 16 | MSB: Bit 0..3 = Minor Bit 4..7 = Major (e.g. 01000011b / 43h / 67d = 4.3) LSB: Revision | N/A | ALL |
| 300772 | 0303h | 1 | Reserved | UINT 16 | - | N/A | ALL |
| 300785 | 0310h | 1 | Reserved | UINT 16 | - | N/A | ALL |

4.2.2 Carlo Gavazzi Controls identification code

Table 4.5 - Modbus: read only mode with functions code 03 and 04 limited to a word at a time

| Modicom address | Physical address | Length [word] | VARIABLE ENG. UNIT | Data Format | Notes | Default | FW |
|-----------------|------------------|---------------|--|-------------|---|---------|-----|
| 300012 | 000Bh | 1 | Carlo Gavazzi Controls identification code | UINT 16 | See Part number available | N/A | ALL |

4.2.3 Password configuration menu

Table 4.6 - Modbus: 0x03, 0x04, 0x06 and 0x10

| Modicom address | Physical address | Length [word] | VARIABLE ENG. UNIT | Data Format | Notes | Default | FW |
|-----------------|------------------|---------------|--------------------|-------------|---|---------|-----|
| 304097 | 1000h | 1 | PASSWORD | UINT 16 | Min value: 0d (no password) Max valid value: 9999d | 0 | ALL |

4.2.4 System configuration menu

Table 4.7 - Modbus: 0x03, 0x04, 0x06 and 0x10

| Modicom address | Physical address | Length [word] | VARIABLE ENG. UNIT | Data Format | Notes | Default | FW |
|-----------------|------------------|---------------|--------------------|-------------|---|---------|------------------------------------|
| 304099 | 1002h | 1 | Measuring system | UINT 16 | Value 0 = "3Pn" (3-phase with neutral) Value 1 = "3P" (3-phase without neutral) Value 2 = "2P" (2-phase with neutral) | 0 (3Pn) | X 1.0 PFx ⁽¹⁾ 1.0 |

IMPORTANT: PFx⁽¹⁾ = for MID models, only values 0 and 1 available; other values cause an exception.

4.2.5 Current inputs configuration menu (only for AV5, MV5 and RG5 models)

Table 4.8 - Modbus: 0x03, 0x04, 0x06 and 0x10

| Modicom address | Physical address | Length [word] | VARIABLE ENG. UNIT | Data Format | Notes | Default | FW |
|-----------------|------------------|---------------|---------------------------|-------------|--|--------------------|---|
| 304100 | 1003h | 2 | Current transformer ratio | UINT 32 | Value min = 10 (CT=1,0) Value max = 20000 (CT=2000.0) | 10 (CT = 1.0) | X ⁽¹⁾ 1.0 PFx ⁽¹⁾⁽²⁾ 1.0 |
| 304100 | 1003h | 2 | Primary current value | UINT 32 | Value min = 100 (CT=10) Value max = 100000 (CT=10000) | 100 (Prim curr=10) | X ⁽¹⁾ 1.0 |
| 304100 | 1003h | 2 | Current range Rogowski | UINT 32 | Value = 0: 600 A Value = 1: 1200 A Value = 2: 2400 A | 2 (2400 A) | X ⁽¹⁾ 1.0 |

IMPORTANT:

- (1) = for AV2 models, register is not available. "Current transformation ratio" is in AV5 models, while "Primary current value" is in MV5 model and "Current range Rogowski" is in RG5 model.
- (2) = register is read-only.

4.2.6 DMD time calculation

Table 4.9 - Modbus: 0x03, 0x04, 0x06 and 0x10

| Modicom address | Physical address | Length [word] | VARIABLE ENG. UNIT | Data Format | Notes | Default | FW |
|-----------------|------------------|---------------|--|-------------|--|------------|-----|
| 304113 | 1010h | 2 | Integration time for DMD power calculation | UINT 32 | Value 0 = 1 min Value 1 = 5 min Value 2 = 10 min Value 3 = 15 min Value 4 = 20 min Value 5 = 30 min Value 6 = 60 min | 3 (15 min) | ALL |

4.2.7 Output, Alarm and Pulse Output configuration

Table 4.10 - Modbus: 0x03, 0x04, 0x06 and 0x10

| Modicom address | Physical address | Length [word] | VARIABLE ENG. UNIT | Data Format | Notes | Default | FW |
|-----------------|------------------|---------------|-----------------------|-------------|---|------------------|-----|
| 304115 | 1012h | 1 | Reserved | UINT 16 | - | - | ALL |
| 304116 | 1013h | 1 | Reserved | UINT 16 | - | - | ALL |
| 304117 | 1014h | 1 | Alarm Enable | UINT 16 | Value 0 = Disabled Value 1 = Enabled | 0 (Disabled) | ALL |
| 304118 | 1015h | 1 | Alarm linked | UINT 16 | Value 1 = System active power [kW] Value 2 = System apparent power [kVA] Value 3 = System reactive power [kvar] Value 4 = System power factor Value 5 = Phase currents [A] Value 6 = Phase voltages [V] Value 7 = Concatenated voltages [V] | 1 (Active power) | ALL |
| 304119 | 1016h | 2 | Alarm SetPoint1 (on) | INT 32 | Value min -1500000 = -15000,00 Value max +1500000 = +15000.00 Example: value 123 = 1.23 | 0 (0,00) | ALL |
| 304121 | 1018h | 2 | Alarm SetPoint2 (off) | INT 32 | Value min -1500000 = -15000,00 Value max +1500000 = +15000.00 Example: value 123 = 1.23 | 0 (0,00) | ALL |
| 304123 | 101Ah | 1 | Delay | UINT 16 | Value min 0 = 0 [s] Value max 3600 = 3600 [s] | 0[s] | ALL |
| 304124 | 101Bh | 1 | Reserved | UINT 16 | - | - | ALL |
| 304125 | 101Ch | 1 | Reserved | UINT 16 | - | - | ALL |
| 304126 | 101Dh | 1 | Reserved | UINT 16 | - | - | ALL |
| 304127 | 101Eh | 1 | Reserved | UINT 16 | - | - | ALL |
| 304128 | 101Fh | 1 | Reserved | UINT 16 | - | - | ALL |
| 304129 | 1020h | 2 | Reserved | UINT 16 | - | - | ALL |

4.2.8 Tariff enabling

Table 4.11 - Modbus: 0x03, 0x04, 0x06 and 0x10

| Modicom address | Physical address | Length [word] | VARIABLE ENG. UNIT | Data Format | Notes | Default | FW |
|-----------------|------------------|---------------|---|-------------|-------------------------------|---------|-----|
| 304354 | 1101h | 1 | Tariff management enabling only for Modbus command management | UINT 16 | Value 0 = OFF Value 1 = ON | 1 (ON) | ALL |

IMPORTANT:

- Tariff configuration at “Active Tariff Selection”,
- If 1200h register is set to 0, the value of configuration at register 1101h is ignored.

4.2.9 Measure mode

Table 4.12 - Modbus: 0x03, 0x04, 0x06 and 0x10

| Modicom address | Physical address | Length [word] | VARIABLE ENG. UNIT | Data Format | Notes | Default | FW |
|-----------------|------------------|---------------|--------------------------------|-------------|--|----------------|---------------------|
| 304356 | 1103h | 1 | Measurement mode selection (1) | UINT 16 | Value 0 = A mode (Absolute) Value 1 = B mode (Counters accumulation by phase) Value 2 = C mode (Bidirectional) | 0 (A mode) (1) | X 1.0 PFx(1) 1.0 |

¹ = register is read-only and the default value matches the part number: 0 (A) for PFA, 1 (B) for PFB and 2 (C) for PFC.

4.2.10 Wrong Connection

Table 4.13 - Modbus: depends on the register

| Modicom address | Physical address | Length [word] | VARIABLE ENG. UNIT | Data Format | Notes | Default | FW |
|-----------------|------------------|---------------|------------------------|-------------|--|-----------------------------|-----------|
| 304357 | 1104h | 1 | Wrong selection enable | UINT 16 | Value 0 = Disabled Value 1 = Enabled Modbus functions: 0x03, 0x04, 0x06 and 0x10 | 1 (Enabled) | ALL |
| 304358 | 1105h | 1 | Wrong selection status | UINT16 | Value 0 = Correct Value 1 = Connection error Modbus functions: 0x03, 0x04 | N/A (real time calculation) | ALL |
| 304359 | 1106h | 1 | PF zone cosine | UINT16 | Value min = 0 ¹ Value max = 1000 | 707 | EM530 AV5 |
| 304360 | 1107h | 1 | PF zone sine | UINT16 | Value min = 0 Value max = 1000 ¹ | 707 | EM530 AV5 |

4.2.11 Wizard display configuration

Table 4.14 - Modbus: 0x03, 0x04, 0x06 and 0x10

| Modicom address | Physical address | Length [word] | VARIABLE ENG. UNIT | Data Format | Notes | Default | FW |
|-----------------|------------------|---------------|------------------------------|-------------|---|-------------|-----|
| 304362 | 1109h | 1 | Quick setup at next power on | UINT 16 | Value min = 0 (Disabled menu) Value max = 1 (Enabled menu) | 1 (Enabled) | ALL |
| 304363 | 110Ah | 1 | Reserved | UINT 16 | - | - | ALL |

4.2.12 Hour counter configuration

Table 4.15 - Modbus: 0x03, 0x04, 0x06 and 0x10

| Modicom address | Physical address | Length [word] | VARIABLE ENG. UNIT | Data Format | Notes | Default | FW |
|-----------------|------------------|---------------|--|-------------|--|-----------|-----|
| 304364 | 110Bh | 2 | Primary start-up current of run hour counter (I_st_CountH) | UINT 32 | Value weight: Ampere*1000 Value min = 10 -- [10mA] Value max = 12000000 [12000A] | 10 (10mA) | ALL |

4.2.13 Phase – Terminal Block configuration

Table 4.16 - Modbus: 0x03, 0x04, 0x06 and 0x10

| Modicom address | Physical address | Length [word] | VARIABLE ENG. UNIT | Data Format | Notes | Default | FW |
|-----------------|------------------|---------------|-------------------------------|-------------|--|--|-------|
| 304433 | 1150h | 1 | Input 1 Voltage configuration | UINT 16 | Value 0 = Terminal Block 1 (default) Value 1 = Terminal Block 1 Value 2 = Terminal Block 2 Value 3 = Terminal Block 3 | 0 (TB 1) | X 1.0 |
| 304434 | 1151h | 1 | Input 2 Voltage configuration | UINT 16 | Value 0 = Terminal Block 2 (default) Value 1 = Terminal Block 1 Value 2 = Terminal Block 2 Value 3 = Terminal Block 3 | 0 (TB 2) | X 1.0 |
| 304435 | 1152h | 1 | Input 3 Voltage configuration | UINT 16 | Value 0 = Terminal Block 3 (default) Value 1 = Terminal Block 1 Value 2 = Terminal Block 2 Value 3 = Terminal Block 3 | 0 (TB 3) | X 1.0 |
| 304436 | 1153h | 1 | Input 1 Current configuration | UINT 16 | Value 0 = Terminal Blocks 1-4 (AV2) or 13-14 (AV5) (default) Value 1 = Terminal Blocks 1-4 (AV2) or 13-14 (AV5) Value 2 = Terminal Blocks 2-5 (AV2) or 15-16 (AV5) Value 3 = Terminal Blocks 3-6 (AV2) or 17-18 (AV5) | 0 (TBs 1-4) (AV2) or 13-14 (AV5) | X 1.0 |
| 304437 | 1154h | 1 | Input 2 Current configuration | UINT 16 | Value 0 = Terminal Blocks 2-5 (AV2) or 15-16 (AV5) (default) Value 1 = Terminal Blocks 1-4 (AV2) or 13-14 (AV5) Value 2 = Terminal Blocks 2-5 (AV2) or 15-16 (AV5) Value 3 = Terminal Blocks 3-6 (AV2) or 17-18 (AV5) | 0 (TBs 2-5) (AV2) or 15-16 (AV5) | X 1.0 |
| 304438 | 1155h | 1 | Input 3 Current configuration | UINT 16 | Value 0 = Terminal Blocks 3-6 (AV2) or 17-18 (AV5) (default) Value 1 = Terminal Blocks 1-4 (AV2) or 13-14 (AV5) Value 2 = Terminal Blocks 2-5 (AV2) or 15-16 (AV5) Value 3 = Terminal Blocks 3-6 (AV2) or 17-18 (AV5) | 0 (TBs 3-6) (AV2) or 17-18 (AV5) | X 1.0 |
| 304439 | 1156h | 1 | Input 1 Current direction | UINT 16 | Value 0 = Direct Value 1 = Inverse | 0 (Direct) | X 1.0 |
| 304440 | 1157h | 1 | Input 2 Current direction | UINT 16 | Value 0 = Direct Value 1 = Inverse | 0 (Direct) | X 1.0 |
| 304441 | 1158h | 1 | Input 3 Current direction | UINT 16 | Value 0 = Direct Value 1 = Inverse | 0 (Direct) | X 1.0 |

IMPORTANT: Not Available for MID version.

4.2.14 Digital input and Active Tariff selection

Table 4.17 - Modbus: 0x03, 0x04, 0x06 and 0x10

| Modicom address | Physical address | Length [word] | VARIABLE ENG. UNIT | Data Format | Notes | Default | FW |
|-----------------|------------------|---------------|--|-------------|---|----------------|-----|
| 304609 | 1200h | 1 | Digital inputs selector | UINT 16 | Value 0 = tariff management via digital Value 1 = only remote status input Value 2 = Partial Meter enabled Value 3 = Reset partial counter | 0 (Dig. input) | ALL |
| 304610 | 1201h | 1 | Tariff number selection via serial communication | UINT 16 | Value 1 = Tariff1 selected Value 2 = Tariff2 selected | 1 (Tariff1) | ALL |

IMPORTANT:

Remote status always available by protocol or display

- If 1200h register is set to 0, the value of configuration at register 1201h is ignored.
- If 1200h register is set to 0, the value of configuration at register 1101h is ignored.

4.2.15 Pages filter, Screen Saver and Home Page

Table 4.18 - Modbus: 0x03, 0x04, 0x06 and 0x10

| Modicom address | Physical address | Length [word] | VARIABLE ENG. UNIT | Data Format | Notes | Default | FW |
|-----------------|------------------|---------------|------------------------|-------------|--|-----------------|---------------------------------|
| 305633 | 1600h | 1 | Pages filter Enable | UINT 16 | Value 0 = Disabled Value 1 = Enabled | 0 (Disabled) | ALL |
| 305634 | 1601h | 1 | Inactivity time enable | UINT 16 | Value 0 = Disabled Value 1 = Home (goes to home page after timeout and stays there) Value 2 = Slide (goes to home page after timeout and scrolls pages) | 1 (Home) | X 1.0 PFx ⁽¹⁾ 1.0 |
| 305635 | 1602h | 1 | Screen Saver time | UINT 16 | Value min = 0 (Disabled) Value max = 20 (Seconds) | 5 | X 1.0 PFx ⁽²⁾ 1.0 |
| 305636 | 1603h | 1 | Home page | UINT 16 | Value min = 1 (Page 1) Value max = 27 (Page 27) | 1 (Page 1) | X 1.0 PFx ⁽³⁾ 1.0 |
| 305637 | 1604h | 1 | Backlight Time | UINT 16 | Value 0 = Always ON Value 1 = 1 min Value 2 = 2 min Value 3 = 5 min Value 4 = 10 min Value 5 = 15 min Value 6 = 30 min Value 7 = 60 min Restart timing on button press | 0 (Always ON) | ALL |
| ... | ... | ... | Reserved | UINT 16 | ... | ... | ... |
| 305649 | 1610h | 1 | Page 1 | UINT 16 | 0 = no filter 1 = Filter 2 = Screen Saver | 2 (Screensaver) | X 1.0 PFx ⁽⁴⁾ 1.0 |
| 305650 | 1611h | 1 | Page 2 | UINT 16 | 0 = no filter 1 = Filter 2 = Screen Saver | 1 (filter) | X 1.0 PFx ⁽⁴⁾ 1.0 |
| 305651 | 1612h | 1 | Page 3 | UINT 16 | 0 = no filter 1 = Filter 2 = Screen Saver | 0 (no filter) | X 1.0 PFx ⁽⁴⁾ 1.0 |
| 305652 | 1613h | 1 | Page 4 | UINT 16 | 0 = no filter | 0 (no filter) | X 1.0 |

| | | | | | | | |
|--------|-------|---|---------|---------|---|-----------------|---------------------------------|
| | | | | | 1 = Filter 2 = Screen Saver | | PFx ⁽⁴⁾ 1.0 |
| 305653 | 1614h | 1 | Page 5 | UINT 16 | 0 = no filter 1 = Filter 2 = Screen Saver | 2 (screensaver) | X 1.0 PFx ⁽⁴⁾ 1.0 |
| 305654 | 1615h | 1 | Page 6 | UINT 16 | 0 = no filter 1 = Filter 2 = Screen Saver | 0 (no filter) | X 1.0 PFx ⁽⁴⁾ 1.0 |
| 305655 | 1616h | 1 | Page 7 | UINT 16 | 0 = no filter 1 = Filter 2 = Screen Saver | 1 (filter) | X 1.0 PFx ⁽⁴⁾ 1.0 |
| 305656 | 1617h | 1 | Page 8 | UINT 16 | 0 = no filter 1 = Filter 2 = Screen Saver | 1 (filter) | X 1.0 PFx ⁽⁴⁾ 1.0 |
| 305657 | 1618h | 1 | Page 9 | UINT 16 | 0 = no filter 1 = Filter 2 = Screen Saver | 0 (no filter) | X 1.0 PFx ⁽⁴⁾ 1.0 |
| 305658 | 1619h | 1 | Page 10 | UINT 16 | 0 = no filter 1 = Filter 2 = Screen Saver | 0 (no Filter) | X 1.0 PFx ⁽⁴⁾ 1.0 |
| 305659 | 161Ah | 1 | Page 11 | UINT 16 | 0 = no filter 1 = Filter 2 = Screen Saver | 0 (no filter) | X 1.0 PFx ⁽⁴⁾ 1.0 |
| 305660 | 161Bh | 1 | Page 12 | UINT 16 | 0 = no filter 1 = Filter 2 = Screen Saver | 0 (no filter) | X 1.0 PFx ⁽⁴⁾ 1.0 |
| 305661 | 161Ch | 1 | Page 13 | UINT 16 | 0 = no filter 1 = Filter 2 = Screen Saver | 0 (no Filter) | X 1.0 PFx ⁽⁴⁾ 1.0 |
| 305662 | 161Dh | 1 | Page 14 | UINT 16 | 0 = no filter 1 = Filter 2 = Screen Saver | 0 (no filter) | X 1.0 PFx ⁽⁴⁾ 1.0 |
| 305663 | 161Eh | 1 | Page 15 | UINT 16 | 0 = no filter 1 = Filter 2 = Screen Saver | 0 (no filter) | X 1.0 PFx ⁽⁴⁾ 1.0 |
| 305664 | 161Fh | 1 | Page 16 | UINT 16 | 0 = no filter 1 = Filter 2 = Screen Saver | 0 (no Filter) | X 1.0 PFx ⁽⁴⁾ 1.0 |
| 305665 | 1620h | 1 | Page 17 | UINT 16 | 0 = no filter 1 = Filter 2 = Screen Saver | 0 (no Filter) | X 1.0 PFx ⁽⁴⁾ 1.0 |
| 305666 | 1621h | 1 | Page 18 | UINT 16 | 0 = no filter 1 = Filter 2 = Screen Saver | 0 (no filter) | X 1.0 PFx ⁽⁴⁾ 1.0 |
| 305667 | 1622h | 1 | Page 19 | UINT 16 | 0 = no filter 1 = Filter 2 = Screen Saver | 0 (no filter) | X 1.0 PFx ⁽⁴⁾ 1.0 |
| 305668 | 1623h | 1 | Page 20 | UINT 16 | 0 = no filter 1 = Filter 2 = Screen Saver | 0 (no filter) | X 1.0 PFx ⁽⁴⁾ 1.0 |
| 305669 | 1624h | 1 | Page 21 | UINT 16 | 0 = no filter 1 = Filter 2 = Screen Saver | 0 (no Filter) | X 1.0 PFx ⁽⁴⁾ 1.0 |
| 305670 | 1625h | 1 | Page 22 | UINT 16 | 0 = no filter 1 = Filter 2 = Screen Saver | 0 (no Filter) | X 1.0 PFx ⁽⁴⁾ 1.0 |
| 305671 | 1626h | 1 | Page 23 | UINT 16 | 0 = no filter 1 = Filter | 0 (no filter) | X 1.0 PFx ⁽⁴⁾ 1.0 |

| | | | | | | | |
|--------|-------|---|---------|---------|---|-----------------|---------------------------------|
| | | | | | 2 = Screen Saver | | |
| 305672 | 1627h | 1 | Page 24 | UINT 16 | 0 = no filter 1 = Filter 2 = Screen Saver | 0 (no filter) | X 1.0 PFx ⁽⁴⁾ 1.0 |
| 305673 | 1628h | 1 | Page 25 | UINT 16 | 0 = no filter 1 = Filter 2 = Screen Saver | 2 (screensaver) | X 1.0 PFx ⁽⁴⁾ 1.0 |
| 305674 | 1629h | 1 | Page 26 | UINT 16 | 0 = no filter 1 = Filter 2 = Screen Saver | 0 (no Filter) | X 1.0 PFx ⁽⁴⁾ 1.0 |
| 305675 | 162Ah | 1 | Page 27 | UINT 16 | 0 = no filter 1 = Filter 2 = Screen Saver | 0 (no Filter) | X 1.0 PFx ⁽⁴⁾ 1.0 |

IMPORTANT:

- PFX⁽¹⁾ : in MID version is Read Only, always 1 (Home),
- PFX⁽²⁾ : in MID version is Read Only, always disabled,
- PFX⁽³⁾ : in MID version is Read Only, always 1,
- PFX⁽⁴⁾ : in MID version only value 0 and 1 available (no screen saver).

4.3 Serial port configuration

Table 4.19 - Modbus: 0x03, 0x04, 0x06 and 0x10

| Modicom address | Physical address | Length [word] | VARIABLE ENG. UNIT | Data Format | Notes | Default | FW |
|-----------------|------------------|---------------|--------------------------|-------------|---|-----------------|-----|
| 308193 | 2000h | 1 | RS485 instrument address | UINT 16 | Value min = 1 Value max = 247 | 1 | ALL |
| 308194 | 2001h | 1 | RS485 baud rate | UINT 16 | Value 1 = 9.6 kbps Value 2 = 19.2 kbps Value 3 = 38.4 kbps Value 4 = 57.6 kbps Value 5 = 115.2 kbps | 1 (9.6 kbps) | ALL |
| 308195 | 2002h | 1 | RS485 parity | UINT 16 | Value 1= no parity Value 2 = even parity | 1 (None) | ALL |
| 308196 | 2003h | 1 | RS485 Stop bit | UINT 16 | Value 0 = 1 stop bit (default) Value 1 = 2 stop bit | 0 (1 stop bit) | ALL |
| 308197 | 2004h | 1 | RS485 Delay on replay | UINT 16 | Value min = 0 Value max = 1000 [ms] | 0 | ALL |

IMPORTANT: the number of stop bits is fixed to “1” if parity is EVEN.

4.4 Reset commands

Table 4.20 - Modbus: 0x03, 0x04, 0x06 and 0x10

| Modicom address | Physical address | Length [word] | VARIABLE ENG. UNIT | Data Format | Notes | Default | FW |
|-----------------|------------------|---------------|---|-------------|--|-----------|------------------------------------|
| 316388 | 4003h | 1 | Reset of total energy counters, total run hour counters (lifetime hour counter excluded) and counters offset ⁽¹⁾ | UINT 16 | Value = 1: command executed Value ≠1: no effect | 0 (fixed) | X 1.0 |
| 316389 | 4004h | 1 | Reset of partial energy counters and partial run hour counters | UINT 16 | Value = 1: command executed Value ≠1: no effect | 0 (fixed) | ALL |
| 316390 | 4005h | 1 | Reset of DMD, and DMD max values | UINT 16 | Value = 1: command executed Value ≠1: no effect | 0 (fixed) | ALL |
| 316391 | 4006h | 1 | Reset Tariff Counters | UINT16 | Value = 1: command executed Value ≠1: no effect | 0 (fixed) | ALL |
| 316417 | 4020h | 1 | Factory setting (Restore default) | UINT 16 | Write 0x0A0A; after this, there is one second to write 0xC1A0 (into this register) to trigger a “Restore Default”. Restores all parameters to their default and restores wizard (no counter) | - | X 1.0 PFx ⁽¹⁾ 1.0 |

IMPORTANT:

- ⁽¹⁾ = MID parameters not reset (CT and TOT counters),
- For these registers the write operation triggers the relative function but the register value does not change. Read value is always 0.

The table below shows what parameters are affected by the Reset commands (TOTAL, PARTIAL and DMDs).

| | Reset TOTAL ¹ | Reset PARTIAL | Reset DMDs |
|--------------------------------|--------------------------|---------------|------------|
| kWh (+) TOT | X* | - | - |
| kvarh (+) TOT | X* | - | - |
| W sys DMD MAX | - | - | X |
| kWh (+) PARTIAL | - | X | - |
| kvarh (+) PARTIAL | - | X | - |
| kWh (+) L1 | X | - | - |
| kWh (+) L2 | X | - | - |
| kWh (+) L3 | X | - | - |
| kWh (-) TOT | X* | - | - |
| kvarh (-) TOT | X* | - | - |
| kWh (-) PARTIAL | - | X | - |
| kvarh (-) PARTIAL | - | X | - |
| kVAh TOT | X* | - | - |
| kVAh PARTIAL | - | X | - |
| Run hour meter | X* | - | - |
| Run hour meter kWh (-) | X* | - | - |
| Run hour meter PARTIAL | - | X | - |
| Run hour meter kWh (-) PARTIAL | - | X | - |
| I1 DMD MAX Value | - | - | X |
| I2 DMD MAX Value | - | - | X |
| I3 DMD MAX Value | - | - | X |
| I1 DMD Value | - | - | X |
| I2 DMD Value | - | - | X |
| I3 DMD Value | - | - | X |
| W1 DMD MAX Value | - | - | X |
| W2 DMD MAX Value | - | - | X |
| W3 DMD MAX Value | - | - | X |
| W1 DMD Value | - | - | X |
| W2 DMD Value | - | - | X |
| W3 DMD Value | - | - | X |
| W sys DMD | - | - | X |
| VA sys DMD | - | - | X |
| var sys DMD | - | - | X |
| W DMD MAX | - | - | X |
| VA DMD MAX | - | - | X |
| var DMD MAX | - | - | X |

IMPORTANT:

- X = available,
- empty cell = not available,
- * =MID parameters not affected by the Reset command.

4.5 Offset

Table 4.21 - Modbus: 0x03, 0x04, 0x06 and 0x10

| Modicom address | Physical address | Length [word] | VARIABLE ENG. UNIT | Data Format | Notes | Default | FW |
|-----------------|------------------|---------------|---------------------------|-------------|---|---------|-------|
| 316641 | 4100h | 1 | Enable Offset kWh + tot | UINT16 | Reads as 0, can be written as 0 or 1. (See procedure below) | 0 | X 1.0 |
| 316642 | 4101h | 1 | Enable Offset kWh – tot | UINT16 | Reads as 0, can be written as 0 or 1. (See procedure below) | 0 | X 1.0 |
| 316643 | 4102h | 1 | Enable Offset kvarh + tot | UINT16 | Reads as 0, can be written as 0 or 1. (See procedure below) | 0 | X 1.0 |
| 316644 | 4103h | 1 | Enable Offset kvarh - tot | UINT16 | Reads as 0, can be written as 0 or 1. (See procedure below) | 0 | X 1.0 |
| 316645 | 4104h | 1 | Enable Offset kVAh + tot | UINT16 | Reads as 0, can be written as 0 or 1. (See procedure below) | 0 | X 1.0 |

Table 4.22 - Modbus: 0x03, 0x04 and 0x10

| Modicom address | Physical address | Length [word] | VARIABLE ENG. UNIT | Data Format | Notes | Default | FW |
|-----------------|------------------|---------------|--------------------|-------------|---|---------|-------|
| 316897 | 4200h | 4 | Offset kWh + tot | UINT64 | Value min = 0, Value max = 9999999999 (Wh) See procedure below | 0 | X 1.0 |
| 316901 | 4204h | 4 | Offset kWh - tot | UINT64 | Value min = 0, Value max = 9999999999 (Wh) See procedure below | 0 | X 1.0 |
| 316905 | 4208h | 4 | Offset kvarh + tot | UINT64 | Value min = 0, Value max = 9999999999 (Wh) See procedure below | 0 | X 1.0 |
| 316909 | 420Ch | 4 | Offset kvarh - tot | UINT64 | Value min = 0, Value max = 9999999999 (Wh) See procedure below | 0 | X 1.0 |
| 316913 | 4210h | 4 | Offset kVAh + tot | UINT64 | Value min = 0, Value max = 9999999999 (Wh) See procedure below | 0 | X 1.0 |

Writing offset procedure: write 1 into Enable Offset register and then, within 3 s, write the relative offset register. The counter is updated and then the offset is written. Time window closes after 3 s.

4.6 Serial number

Table 4.23 - Modbus: 0x03, 0x04

| Modicom address | Physical address | Length [word] | VARIABLE ENG. UNIT | Data Format | Notes | Default | FW |
|-----------------|------------------|---------------|--|-------------|--|---------|-----|
| 320481 | 5000h | 1 | Letter 1 (from SX) Letter 2 (from SX) | UINT 16 | MSB: ASCII code LSB: ASCII code | - | ALL |
| 320482 | 5001h | 1 | Letter 3 (from SX) Letter 4 (from SX) | UINT 16 | MSB: ASCII code LSB: ASCII code | - | ALL |
| 320483 | 5002h | 1 | Letter 5 (from SX) Letter 6 (from SX) | UINT 16 | MSB: ASCII code LSB: ASCII code | - | ALL |
| 320484 | 5003h | 1 | Letter 7 (from SX) Letter 8 (from SX) | UINT 16 | MSB: ASCII code LSB: ASCII code | - | ALL |
| 320485 | 5004h | 1 | Letter 9 (from SX) Letter 10 (from SX) | UINT 16 | MSB: ASCII code LSB: ASCII code | - | ALL |
| 320486 | 5005h | 1 | Letter 11 (from SX) Letter 12 (from SX) | UINT 16 | MSB: ASCII code LSB: ASCII code | - | ALL |
| 320487 | 5006h | 1 | Letter 13 (from SX) | UINT 16 | MSB: ASCII code LSB: not to be used | - | ALL |
| 320488 | 5007h | 1 | Production year | UINT 16 | 4 digits (e.g.: "2020") | - | ALL |

Table 4.24 - Modbus: 0x03, 0x04, 0x06 and 0x10

| Modicom address | Physical address | Length [word] | VARIABLE ENG. UNIT | Data Format | Notes | Default | FW |
|-----------------|------------------|---------------|--------------------|-------------|------------------------------------|------------------|-----|
| 320489 | 5008h | 1 | Name Configurable | UINT 16 | MSB: ASCII code LSB: ASCII code | 0000h (empty) | ALL |
| 320490 | 5009h | 1 | Name Configurable | UINT 16 | MSB: ASCII code LSB: ASCII code | 0000h (empty) | ALL |
| 320491 | 500Ah | 1 | Name Configurable | UINT 16 | MSB: ASCII code LSB: ASCII code | 0000h (empty) | ALL |
| 320492 | 500Bh | 1 | Name Configurable | UINT 16 | MSB: ASCII code LSB: ASCII code | 0000h (empty) | ALL |
| 320493 | 500Ch | 1 | Name Configurable | UINT 16 | MSB: ASCII code LSB: ASCII code | 0000h (empty) | ALL |
| 320494 | 500Dh | 1 | Name Configurable | UINT 16 | MSB: ASCII code LSB: ASCII code | 0000h (empty) | ALL |
| 320495 | 500Eh | 1 | Name Configurable | UINT 16 | MSB: ASCII code LSB: ASCII code | 0000h (empty) | ALL |
| 320496 | 500Fh | 1 | Name Configurable | UINT 16 | MSB: ASCII code LSB: ASCII code | 0000h (empty) | ALL |

4.7 Secondary Address

Table 4.25 - Modbus: 0x03, 0x04

| Modicom address | Physical address | Length [word] | VARIABLE ENG. UNIT | Data Format | Notes | Default | FW |
|-----------------|------------------|---------------|------------------------------|-------------|-------------------------|---------|-----|
| 320497 | 5010h | 2 | Instrument secondary address | UINT 32 | M-BUS secondary address | N/A | ALL |
| 308705 | 2200h | 1 | Module Extern Revision | UINT 16 | Module revision | N/A | ALL |

IMPORTANT: this parameter is used only when the device is connected to VMUB (specific “modbus – M-Bus” gateway).

4.8 Device state

Table 4.26 - Modbus: 0x03, 0x04

| Modicom address | Physical address | Length [word] | VARIABLE ENG. UNIT | Data Format | Notes | Default | FW |
|-----------------|------------------|---------------|--------------------|-------------|---|---------|-----|
| 320499 | 5012h | 1 | Device state | UINT 16 | Value 0 = RUN Value 1 = FAULT (prevails on value “2”) Value 2 = CONFIGURATION ERROR (See Phase – Terminal Block configuration) | N/A | ALL |
| 320500 | 5013h | 2 | Reserved | UINT32 | Internal use | N/A | N/A |
| 320502 | 5015h | 2 | Reserved | UINT32 | Internal use | N/A | N/A |
| 320504 | 5017h | 2 | Reserved | UINT32 | Internal use | N/A | N/A |
| 320506 | 5019h | 1 | Reserved | UINT16 | Internal use | N/A | N/A |
| 320521 | 5028h | 2 | Reserved | UINT 32 | Internal use | N/A | N/A |
| 320523 | 502Ah | 2 | Reserved | UINT 32 | Internal use | N/A | N/A |
| 320525 | 502Ch | 2 | Reserved | UINT 32 | Internal use | N/A | N/A |
| 320527 | 502Eh | 2 | Reserved | UINT 32 | Internal use | N/A | N/A |
| 320529 | 5030h | 2 | Reserved | UINT 32 | Internal use | N/A | N/A |

5. Revisions

| Revisions | Date | Note |
|-----------|------------|---|
| Rev. 1.0 | 17/06/2020 | First release |
| Rev. 1.0 | 20/06/2020 | Added note to register 0x1103 |
| Rev. 1.0 | 23/06/2020 | Notes formatting |
| Rev. 1.1 | 09/09/2020 | Changed phase sequence values |
| Rev. 1.2 | 23/11/2020 | Corrected Modicom addresses and document formatting |
| Rev. 1.3 | 01/01/2021 | Changed the default value for the parameter Screen Saver time (1602h) from "0" to "5" |
| Rev. 1.4 | 15/06/2021 | Corrected backlight time values (15 minutes instead of 20) |
| Rev. 1.5 | 20/10/2021 | Add. 0x2200 Module external revision |
| Rev. 1.6 | 21/12/2021 | Add. 1106h / 1107h sine & cosine for calculate zones wrong connection 4.6.8 |
| Rev. 1.7 | 13/01/2023 | Modified / insert Gavazzi Code for bidirectional |
| Rev. 1.8 | 04/10/2024 | Added model EM530DINMV53XS1X; Pag 20, par. 4.2.12 , tab. 4.15 : Correction of modicom addresses |
| Rev. 1.9 | 30/10/2024 | Correction of some Modicom addresses. Added further information about EM530DINMV53XS1X. |
| Rev. 1.10 | 04/04/2025 | P. 18, par. 4.2.5, tab. 4.8, correction of the minimum value for the parameter "Primary current value" for the MV5 model: replaced the wrong value "10" with correct value "100". |
| Rev. 1.11 | 07/08/2025 | P. 18, par. 4.2.5, tab. 4.8, added current range for EM530DINRG53XS1X model. |